

PROFIBUS Manual



Servo positioning controller DIS-2 48/10 FB

Copyrights

© 2011 Metronix Meßgeräte und Elektronik GmbH. All rights reserved.

The information and data in this document have been composed to the best of our knowledge. However, deviations between the document and the product cannot be excluded entirely. For the devices and the corresponding software in the version handed out to the customer, Metronix guarantees the contractual use in accordance with the user documentation. In the case of serious deviations from the user documentation, Metronix has the right and the obligation to repair, unless it would involve an unreasonable effort. A possible liability does not include deficiencies caused by deviations from the operating conditions intended for the device and described in the user documentation.

Metronix does not guarantee that the products meet the buyer's demands and purposes or that they work together with other products selected by the buyer. Metronix does not assume any liability for damages resulting from the combined use of its products with other products or resulting from improper handling of machines or systems.

Metronix Meßgeräte und Elektronik GmbH reserves the right to modify, amend, or improve the document or the product without prior notification.

This document may, neither entirely nor in part, be reproduced, translated into any other natural or machine-readable language nor transferred to electronic, mechanical, optical or any other kind of data media, without expressive authorisation by the author.

Trademarks

Any product names in this document may be registered trademarks. The sole purpose of any trademarks in this document is the identification of the corresponding products.

ServoCommander™ is a registered trademark of Metronix Meßgeräte und Elektronik GmbH.

Microsoft and Windows are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

| Revision Log | | | |
|--------------|---|----------------|----------------|
| Author: | Metronix Meßgeräte und Elektronik GmbH | | |
| Manual: | PROFIBUS-Manual Servo positioning controller DIS-2 48/10 FB | | |
| File name: | Profi-HB_DIS-2_2p0_EN | | |
| No. | Description | Revision index | Date of change |
| 001 | Creation | 1.0 | 06th July 2006 |
| 002 | Update Corporate Identity – No technical changes | 2.0 | 02.05.2011 |
| | | | |
| | | | |
| | | | |
| | | | |

Table of Contents

| | | |
|-------|---|----|
| 1 | General | 8 |
| 1.1 | Documentation | 8 |
| 1.2 | PROFIBUS documentation | 8 |
| 2 | Safety notes for electrical drives and controllers | 10 |
| 2.1 | Used symbols | 10 |
| 2.2 | General notes | 11 |
| 2.3 | Danger resulting from misuse | 12 |
| 2.4 | Safety notes | 13 |
| 2.4.1 | General safety notes | 13 |
| 2.4.2 | Safety notes for assembly and maintenance | 14 |
| 2.4.3 | Protection against contact with electrical parts | 15 |
| 2.4.4 | Protection against electrical shock by means of protective extra-low voltage (PELV) | 16 |
| 2.4.5 | Protection against dangerous movements | 17 |
| 2.4.6 | Protection against contact with hot parts | 17 |
| 2.4.7 | Protection during handling and assembly | 18 |
| 3 | Wiring and pin assignment | 19 |
| 3.1 | Pin assignment | 19 |
| 3.2 | PROFIBUS cable | 19 |
| 3.3 | Termination and bus terminating resistors | 20 |
| 4 | PROFIBUS-DP and PROFIdrive | 21 |
| 4.1 | Overview of DP and its different versions | 21 |
| 4.2 | Basic functions of DP-V0 | 22 |
| 4.3 | PROFIdrive overview | 22 |
| 5 | PROFIBUS connection | 24 |
| 5.1 | Introduction | 24 |
| 5.2 | Slave overview | 25 |
| 5.3 | Master overview | 25 |
| 6 | Telegram editor | 27 |
| 6.1 | Introduction | 27 |
| 6.2 | Reception telegrams | 27 |
| 6.3 | Response telegrams | 29 |
| 7 | Physical units | 31 |
| 8 | Operating parameters | 34 |
| 8.1 | PROFIBUS operating parameters | 34 |
| 9 | Device control | 36 |
| 9.1 | Overview | 36 |
| 9.2 | Control word 1 | 36 |
| 9.3 | Status word 1 | 40 |
| 9.4 | State diagram and device control | 42 |
| 9.4.1 | State diagram | 43 |
| 9.4.2 | Device control | 44 |

| | | |
|----------|--|----|
| 9.4.3 | Command overview | 46 |
| 10 | Manufacturer-specific parameter numbers..... | 48 |
| 10.1 | Overview | 48 |
| 10.2 | PNUs for positioning mode | 50 |
| 10.2.1 | PNU 1000: Position Set Number..... | 50 |
| 10.2.2 | PNU 1001: Position Data | 50 |
| 10.2.3 | PNU 1002: Start Set Number..... | 52 |
| 10.2.4 | PNU 1003: Position Profile Type..... | 52 |
| 10.2.5 | PNU 1050: Homing Method | 53 |
| 10.2.6 | PNU 1051: Home Offset | 53 |
| 10.3 | PNUs for speed control mode..... | 55 |
| 10.3.1 | PNU 1010: Target Velocity..... | 55 |
| 10.3.2 | PNU 1011: Accelerations for Velocity Control | 55 |
| 10.4 | PNUs for Different Operating Modes | 57 |
| 10.4.1 | PNU 1022: Current Limitation | 57 |
| 10.4.2 | PNU 1040: Jogging | 58 |
| 10.4.3 | PNU 1290: Motor Data | 58 |
| 10.4.4 | PNU 1350: Enable Logic..... | 59 |
| 10.5 | Actual values | 60 |
| 10.5.1 | PNU 1100: Position Actual Value..... | 60 |
| 10.5.2 | PNU 1101: Velocity Actual Value..... | 60 |
| 10.5.3 | PNU 1102: Current Actual Value | 61 |
| 10.5.4 | PNU 1140: Digital Outputs | 61 |
| 10.5.5 | PNU 1141: Digital Inputs..... | 61 |
| 10.6 | Parameters for the telegram structure | 62 |
| 10.6.1 | PNU 2000: PKW Access..... | 62 |
| 10.6.2 | PNU 2010: Placeholders..... | 63 |
| 10.6.3 | PNU 2011: Element 0 | 64 |
| 10.7 | Parameter for Various Intents | 65 |
| 10.7.1 | PNU 1601: Last Error Code | 65 |
| 10.7.2 | PNU 1610: Error Managment..... | 66 |
| 11 | Operating modes | 67 |
| 11.1 | Overview | 67 |
| 11.2 | Parameters..... | 67 |
| 11.2.1 | PNU 1500: Operating Mode..... | 67 |
| 11.3 | Speed control mode | 68 |
| 11.4 | Positioning mode..... | 68 |
| 12 | Profile-specific parameter numbers..... | 70 |
| 12.1 | Overview | 70 |
| 12.2 | PNU description | 70 |
| 12.2.1 | PNU 971: Transfer into a Non-Volatile Memory..... | 70 |
| 13 | Function and data blocks for SIEMENS S7 | 71 |
| 13.1 | Overview | 71 |
| 13.2 | Function and data blocks for DIS-2 48/10 FB servo positioning controllers..... | 72 |
| 13.2.1 | Function block (FB) overview..... | 72 |
| 13.2.2 | FBs of DIS-2 48/10 FB servo positioning controllers | 73 |
| 13.2.2.1 | FB_position (FB 41 positioning mode)..... | 73 |
| 13.2.2.2 | FB_velocity (FB 43 speed control)..... | 76 |
| 13.2.3 | Integration of FBs and DBs | 77 |
| 13.2.4 | PROFIBUS connection of DIS-2 48/10 FB servo positioning controller | 80 |

| | |
|---|----|
| 13.2.4.1 Reception telegram of the speed control example project..... | 80 |
| 13.2.4.2 Reception telegram of the positioning example project | 82 |
| 13.2.4.3 Response telegram for the example projects | 83 |
| 13.2.5 Creating an S7 program..... | 84 |
| 13.2.6 Integrating the GSD file..... | 84 |
| 13.2.7 Hardware configuration..... | 85 |
| 13.2.8 Integrating the servo positioning controller | 86 |
| 13.2.9 Overview of function and data blocks: | 87 |

List of Figures

| | |
|---|----|
| Figure 3.1: PROFIBUS connector for DIS-2 48/10 FB | 19 |
| Figure 5.1: Example of the telegram format for the DIS-2 48/10 FB | 24 |
| Figure 5.2: Hardware configuration under SIEMENS S7 | 26 |
| Figure 6.1: Composition of a reception telegram | 28 |
| Figure 6.2: Composition of a response telegram | 30 |
| Figure 7.1: Setting of physical units | 31 |
| Figure 7.2: Gear ratio | 32 |
| Figure 8.1: Setting of operating parameters | 34 |
| Figure 9.1: Simplified state diagram | 43 |
| Figure 10.1: Interpretation of the home offset | 54 |
| Figure 11.1: Uninterrupted sequence of motion tasks | 69 |

1 General

1.1 Documentation

This manual describes the field bus connection of DIS-2 48/10 FB servo positioning controllers under PROFIBUS-DP. It describes the adjustment of the physical parameters, the activation of the PROFIBUS communication, the integration into the master connection and the communication with the servo positioning controller. It is intended for persons who are familiar with this servo positioning controller model.

It contains safety notes which have to be complied with.

Further information can be found in the following manual:

- ❖ **User Manual “DIS-2 48/10, DIS-2 48/10 IC, DIS-2 48/10 FB”:** Description of the device functionality and the software functions of the firmware including RS232 communication. Description of the DIS-2 ServoCommander™ parameterisation program with instructions concerning the start-up of DIS-2 48/10 servo positioning controllers and description of the technical specifications and the device functionality as well as notes on the installation and the operation of the servo positioning controller DIS-2 48/10.

1.2 PROFIBUS documentation

PROFIBUS (**PRO**cess **FI**eld**BUS**) is a standard defined by the German association of PROFIBUS users (PROFIBUS Nutzerorganisation e.V.). A complete description of the field bus system can be found in the following standard:

IEC 61158 „Digital data communication for measurement and control – Fieldbus for use in industrial control systems“: This standard is divided into several parts and defines 10 “Fieldbus Protocol Types”. Among these types, PROFIBUS is specified as type 3. PROFIBUS comes in two versions. One is PROFIBUS-DP for quick data exchange in production and building automation (DP = decentralized peripherals). The standard also describes the integration of the system into the ISO/OSI network model.

Further information, contact addresses etc. can be found under www.profibus.com.

Further documentation (in German) concerning the use of PROFIBUS-DP:

1. PROFIBUS-DP
Grundlagen, Tips und Tricks für Anwender
Manfred Popp
Hüthig-Verlag, Heidelberg 1998
2. Dezentralisieren mit PROFIBUS-DP
Aufbau, Projektierung und Einsatz des PROFIBUS-DP mit Simatic S7
Josef Weigmann, Gerhard Kilian
Siemens, Erlangen/München 1998
3. Der neue Schnelleinstieg für PROFIBUS DP
Von DP-V0 bis DP-V2
Manfred Popp
PROFIBUS Nutzerorganisation e.V., Karlsruhe 2002
4. PROFIdrive – Profile Drive Technology,
Vers. 3.1,
PROFIBUS Nutzerorganisation e.V., Karlsruhe
5. IEC 61158 - Feldbus für industrielle Leitsysteme

2 Safety notes for electrical drives and controllers

2.1 Used symbols



Information

Important information and notes.



Caution!

Nonobservance may result in severe property damages.



DANGER!

Nonobservance may result in **property damages** and in **personal injuries**.



Caution! Dangerous voltages.

The safety note indicates a possible perilous voltage.

2.2 General notes



In the case of damage resulting from non-compliance of the safety notes in this manual Metronix Meßgeräte und Elektronik GmbH will assume any liability.

If the documentation in the language at hand is not understood accurately, please contact and inform your supplier.

Sound and safe operation of the servo drive controller requires proper and professional transportation, storage, assembly and installation as well as proper operation and maintenance. Only trained and qualified personnel may handle electrical devices:

TRAINED AND QUALIFIED PERSONAL

in the sense of this product manual or the safety notes on the product itself are persons who are sufficiently familiar with the setup, assembly, commissioning and operation of the product as well as all warnings and precautions as per the instructions in this manual and who are sufficiently qualified in their field of expertise:

- ❖ Education and instruction or authorisation to switch devices/systems on and off and to ground them as per the standards of safety engineering and to efficiently label them as per the job demands.
- ❖ Education and instruction as per the standards of safety engineering regarding the maintenance and use of adequate safety equipment.
- ❖ First aid training.

The following notes must be read prior to the initial operation of the system to prevent personal injuries and/or property damages:



These safety notes must be complied with at all times.



Do not try to install or commission the servo drive controller before carefully reading all safety notes for electrical drives and controllers contained in this document. These safety instructions and all other user notes must be read prior to any work with the servo drive controller.



In case you do not have any user notes for the servo drive controller, please contact your sales representative. Immediately demand these documents to be sent to the person responsible for the safe operation of the servo drive controller.



If you sell, rent and/or otherwise make this device available to others, these safety notes must also be included.



The user must not open the servo drive controller for safety and warranty reasons.



Professional control process design is a prerequisite for sound functioning of the servo drive controller!



DANGER!

Inappropriate handling of the servo drive controller and non-compliance of the warnings as well as inappropriate intervention in the safety features may result in property damage, personal injuries, electric shock or in extreme cases even death.

2.3 Danger resulting from misuse



DANGER!

High electrical voltages and high load currents!

Danger to life or serious personal injury from electrical shock!



DANGER!

High electrical voltage caused by wrong connections!

Danger to life or serious personal injury from electrical shock!



DANGER!

Surfaces of device housing may be hot!

Risk of injury! Risk of burning!



DANGER!

Dangerous movements!

Danger to life, serious personal injury or property damage due to unintentional movements of the motors!

2.4 Safety notes

2.4.1 General safety notes



The servo drive controller corresponds to IP54 class of protection as well as pollution level 1. Make sure that the environment corresponds to this class of protection and pollution level.



Only use replacements parts and accessories approved by the manufacturer.



The devices must be connected to the mains supply as per EN regulations, so that they can be cut off the mains supply by means of corresponding separation devices (e.g. main switch, contactor, power switch).



Gold contacts or contacts with a high contact pressure should be used to switch the control contacts.



Preventive interference rejection measures should be taken for control panels, such as connecting contactors and relays using RC elements or diodes.



The safety rules and regulations of the country in which the device will be operated must be complied with.



The environment conditions defined in the product documentation must be kept. Safety-critical applications are not allowed, unless specifically approved by the manufacturer.



For notes on installation corresponding to EMC, please refer to User Manual of the servo positioning controller DIS-2 48/10 FB. The compliance with the limits required by national regulations is the responsibility of the manufacturer of the machine or system.



The technical data and the connection and installation conditions for the servo drive controller are to be found in this product manual and must be met.



DANGER!

The general setup and safety regulations for work on power installations (e.g. DIN, VDE, EN, IEC or other national and international regulations) must be complied with.

Non-compliance may result in death, personal injury or serious property damages.



Without claiming completeness, the following regulations and others apply:

VDE 0100 Regulations for the installation of high voltage (up to 1000 V) devices

EN 60204 Electrical equipment of machines

EN 50178 Electronic equipment for use in power installations

2.4.2 Safety notes for assembly and maintenance

The appropriate DIN, VDE, EN and IEC regulations as well as all national and local safety regulations and rules for the prevention of accidents apply for the assembly and maintenance of the system. The plant engineer or the operator is responsible for compliance with these regulations:



The servo drive controller must only be operated, maintained and/or repaired by personnel trained and qualified for working on or with electrical devices.

Prevention of accidents, injuries and/or damages:



Additionally secure vertical axes against falling down or lowering after the motor has been switched off, e.g. by means of:

- Mechanical locking of the vertical axle,
- External braking, catching or clamping devices or
- Sufficient balancing of the axle.



The motor holding brake supplied by default or an external motor holding brake driven by the drive controller alone is not suitable for personal protection!



Render the electrical equipment voltage-free using the main switch and protect it from being switched on again until the DC bus circuit is discharged, in the case of:

- Maintenance and repair work
- Cleaning
- long machine shutdowns



Prior to carrying out maintenance work make sure that the power supply has been turned off, locked and the DC bus circuit is discharged.



Be careful during the assembly. During the assembly and also later during operation of the drive, make sure to prevent drill chips, metal dust or assembly parts (screws, nuts, cable sections) from falling into the device.



Also make sure that the external power supply of the controller (24V) is switched off.



The DC bus circuit or the mains supply must always be switched off prior to switching off the 24V controller supply.



Carry out work in the machine area only, if AC and/or DC supplies are switched off. Switched off output stages or controller enablings are no suitable means of locking. In the case of a malfunction the drive may accidentally be put into action.



Initial operation must be carried out with idle motors, to prevent mechanical damages e.g. due to the wrong direction of rotation.



Electronic devices are never fail-safe. It is the user's responsibility, in the case an electrical device fails, to make sure the system is transferred into a secure state.



The servo drive controller and in particular the brake resistor, externally or internally, can assume high temperatures, which may cause serious burns.

2.4.3 Protection against contact with electrical parts

This section only concerns devices and drive components carrying voltages exceeding 50 V. Contact with parts carrying voltages of more than 50 V can be dangerous for people and may cause electrical shock. During operation of electrical devices some parts of these devices will inevitably carry dangerous voltages.



DANGER!

High electrical voltage!

Danger to life, danger due to electrical shock or serious personal injury!

The appropriate DIN, VDE, EN and IEC regulations as well as all national and local safety regulations and rules for the prevention of accidents apply for the assembly and maintenance of the system. The plant engineer or the operator is responsible for compliance with these regulations:



Before switching on the device, install the appropriate covers and protections against accidental contact. Rack-mounted devices must be protected against accidental contact by means of a housing, e.g. a switch cabinet. The regulations VBG 4 must be complied with!



Always connect the ground conductor of the electrical equipment and devices securely to the mains supply. Due to the integrated line filter the leakage current exceeds 3.5 mA!



Comply with the minimum copper cross-section for the ground conductor over its entire length as per EN60617!



Prior to the initial operation, even for short measuring or testing purposes, always connect the ground conductor of all electrical devices as per the terminal diagram or connect it to the ground wire. Otherwise the housing may carry high voltages which can cause electrical shock.



Do not touch electrical connections of the components when switched on.



Prior to accessing electrical parts carrying voltages exceeding 50 Volts, disconnect the device from the mains or power supply. Protect it from being switched on again.



For the installation the amount of DC bus voltage must be considered, particularly regarding insulation and protective measures. Ensure proper grounding, wire dimensioning and corresponding short-circuit protection.

2.4.4 Protection against electrical shock by means of protective extra-low voltage (PELV)

All connections and terminals with voltages between 5 and 50 Volts at the servo drive controller are protective extra-low voltage, which are designed safe from contact in correspondence with the following standards:

International: IEC 60364-4-41

European countries within the EU: EN 50178/1998, section 5.2.8.1.



DANGER!

High electrical voltages due to wrong connections!

Danger to life, risk of injury due to electrical shock!

Only devices and electrical components and wires with a protective extra low voltage (PELV) may be connected to connectors and terminals with voltages between 0 to 50 Volts.

Only connect voltages and circuits with protection against dangerous voltages. Such protection may be achieved by means of isolation transformers, safe optocouplers or battery operation.

2.4.5 Protection against dangerous movements

Dangerous movements can be caused by faulty control of connected motors, for different reasons:

- ❖ Improper or faulty wiring or cabling
- ❖ Error in handling of components
- ❖ Error in sensor or transducer
- ❖ Defective or non-EMC-compliant components
- ❖ Error in software in superordinated control system

These errors can occur directly after switching on the device or after an indeterminate time of operation.

The monitors in the drive components for the most part rule out malfunctions in the connected drives. In view of personal protection, particularly the danger of personal injury and/or property damage, this may not be relied on exclusively. Until the built-in monitors come into effect, faulty drive movements must be taken into account; their magnitude depends on the type of control and on the operating state.



DANGER!

Dangerous movements!

Danger to life, risk of injury, serious personal injuries or property damage!

For the reasons mentioned above, personal protection must be ensured by means of monitoring or superordinated measures on the device. These are installed in accordance with the specific data of the system and a danger and error analysis by the manufacturer. The safety regulations applying to the system are also taken into consideration. Random movements or other malfunctions may be caused by switching the safety installations off, by bypassing them or by not activating them.

2.4.6 Protection against contact with hot parts



DANGER!

Housing surfaces may be hot!

Risk of injury! Risk of burning!



Do not touch housing surfaces in the vicinity of heat sources! Danger of burning!



Before accessing devices let them cool down for 10 minutes after switching them off.



Touching hot parts of the equipment such as the housing, which contain heat sinks and resistors, may cause burns!

2.4.7 Protection during handling and assembly

Handling and assembly of certain parts and components in an unsuitable manner may under adverse conditions cause injuries.



DANGER!

Risk of injury due to improper handling!

Personal injury due to pinching, shearing, cutting, crushing!

The following general safety notes apply:



Comply with the general setup and safety regulations on handling and assembly.



Use suitable assembly and transportation devices.



Prevent incarcerations and contusions by means of suitable protective measures.



Use suitable tools only. If specified, use special tools.



Use lifting devices and tools appropriately.



If necessary, use suitable protective equipment (e.g. goggles, protective footwear, protective gloves).



Do not stand underneath hanging loads.




Remove leaking liquids on the floor immediately to prevent slipping.

3 Wiring and pin assignment

3.1 Pin assignment

The PROFIBUS interface in the servo positioning controller DIS-2 48/10 FB is in accordance with EN 50170 as 5-pin M12 plug (b-codes, at the technology plug-in module, as socket and as plug)

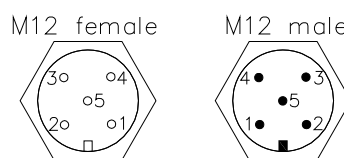

| pin | color of conductor | Signal Profibus |
|-----|--------------------|-----------------|
| 1 | - | +5V |
| 2 | green | A-line |
| 3 | - | 0V |
| 4 | red | B-line |
| 5 | - | shield |

Figure 3.1: PROFIBUS connector for DIS-2 48/10 FB



PROFIBUS wiring

Because of the very high baud rates we recommend using standardized cables and connectors. They offer additional diagnose functionalities and facilitate rapid analysis of the field bus hardware in the event of malfunctions.

When setting up the PROFIBUS network, compliance with the information given in the standard literature and the following information and notes is strongly recommended in order to obtain a stable, trouble-free system. Improper wiring may lead to problems with the PROFIBUS causing the servo positioning controller to automatically deactivate itself while signalling an error.

3.2 PROFIBUS cable

PROFIBUS cable:

Bus cable PROFIBUS: Socket straight, shielded M12-B-codiert, 2-pole
 Pin straight, shielded M12-B-codiert, 2-pole

Manufacturer: Phoenix Contact

| order number: | length in m |
|---------------|-------------|
| 15 18 10 6 | 0,3 |
| 15 18 11 9 | 0,5 |
| 15 18 12 2 | 1 |
| 15 18 13 5 | 2 |
| 15 18 14 8 | 5 |
| 15 18 15 1 | 10 |
| 15 18 16 4 | 15 |

3.3 Termination and bus terminating resistors

Every bus segment of the PROFIBUS network has to be equipped with bus terminating resistors to minimize line reflections, to guarantee practically constant load behaviour on the bus and to adjust a defined rest potential on the line. Termination has to be provided at the **beginning** and at the **end of every bus segment**.

The terminating resistors of the PROFIBUS module of the servo positioning controller DIS-2 48/10 FB are already integrated in the module so that external connections (special connectors) are not required. The terminating resistors can be activated by setting the two DIP switches on the module (switches set to ON). Due to the high class of protection of the servo positioning controller DIS-2 48/10 FB the terminating resistors can not served from outside. To switch on/off the terminating resistors is only possible, if the servo positioning controller DIS-2 48/10 FB is removed from the motor.

Therefore a terminal resistance in form of a M12 of plug is recommended to use.



Bus terminating resistors

The DIP switches for activating the bus terminating resistors are already integrated on the technological modules.

External connection is also possible. The power supply of 5 V required for the externally connected terminating resistors is supplied to the PROFIBUS connector of the module (see pin assignment).



Faulty or improper bus termination is the most common cause of errors in the event of malfunctions.

If the adjusted baud rate is > 1.5 Mbaud, connectors with integrated line inductors (110 nH) have to be used because of the capacitive load of the device and the resulting line reflections.

4 PROFIBUS-DP and PROFIdrive

4.1 Overview of DP and its different versions

The DP communication protocol (DP = decentralized peripherals) is intended for quick data exchange on the field level. On this level, central automation devices, such as PLC, PC or process control systems communicate via a quick serial connection with decentralized field devices, such as I/O devices, drives, valves, measuring transducers and analysis devices. Data exchange with the decentralized devices is mainly cyclic. The required communication functions are defined by the DP basic functions (version DP-V0).

To meet special requirements of different areas of application, the basic functions of DP were extended and special functions were added so that now three versions of DP, i.e. DP-V0, DP-V1 and DP-V2, are available. Every version has a special main focus. They can be described as follows:

- ❖ DP-V0 This version offers the basic functionality of DP, such as cyclic data exchange and station-, module- and channel-specific diagnosis.
- ❖ DP-V1 This version includes extensions for process automation like, for example, acyclic data exchange for parameterisation, operation, monitoring and alarm management of intelligent field devices in parallel to cyclic exchange of useful data. Bus devices can be accessed online through engineering tools. In addition, DP-V1 includes alarms like the status alarm, the update alarm and a manufacturer-specific alarm.
- ❖ DP-V2 This version includes further extensions and is mainly intended to meet the requirements of drive applications. Additional functions such as, for example, isochronous slave operation and slave-to-slave communication allow DP-V2 to be used as a drive bus for controlling quick sequences of motion in drive shafts.

This version requires special hardware. At present, the control systems and target applications of the servo positioning controller DIS-2 48/10 FB is not equipped with this hardware. This is why support of DV-V2 is not intended.

The versions of DP are specified in detail in IEC 61158 (see *chapter 1.2 PROFIBUS documentation*).

Every DP system comprises different types of devices. Three types can be distinguished: DP master class 1, DP master class 2 and DP slaves. DP can be used to realize mono- and multi-master systems and thus offers a high level of flexibility for system configuration. A maximum of 126 devices (masters or slaves) can be connected to the bus.

Due to the extensive diagnosis functions of DP, errors can be localized very quickly. Diagnosis messages are transmitted on the bus and collected at the master.

DP master class 1 (DPM1) is a central control system which exchanges information cyclically with decentralized stations (slaves) in a defined message cycle. Typical DPM1 devices are programmable logic controls (PLCs) or PCs, for example.

DP master class 2 (DPM2) devices are engineering, project or operating devices. They are used for start-up, maintenance and diagnosis, to configure the connected devices, to evaluate measured values and parameters and to check the device status. A DPM2 device does not have to be permanently connected to the bus system.

A slave is peripheral device (I/O device, drive, etc.) which reads in process information and/or uses output information to intervene in the process. In terms of communication, slaves are passive devices as they reply only to direct requests from a DPM1 or DPM2 device.

4.2 Basic functions of DP-V0

The central control system (master) cyclically reads the input information from the slaves and cyclically writes the output information to the slaves. The bus cycle time should be shorter than the program cycle time of the central automation system which is in the range of about 10 ms for many applications. A high data throughput alone is not enough for successful use of a bus system. Other factors, such as ease of operation, good diagnosis facilities and a fail-safe transmission method are more important. These characteristics have been combined successfully in DP-V0.

DP needs only about 1 ms to transmit 512 bits of input data and 512 bits of output data distributed to 32 connected devices. DP transmits input and output data in a message cycle. Useful data are transmitted using the SRD service (Send and Receive Data Service) of ISO/OSI layer 2.

To transmit data using the DP-V0 service, the amount and the meaning of the data to be transmitted have to be defined both for the master and for the slave. When a PROFIBUS connection is configured, the user has to make this definition before the field bus connection can be parameterized at both ends.

4.3 PROFIdrive overview

The "PROFIBUS profile for drive technology" or short PROFIdrive is a manufacturer standard for implementing PROFIBUS interfaces for drives. It has been defined by the association of PROFIBUS users. Just like CANopen, its aim is to offer the user a defined interface for programming servo controllers. This interface should be as manufacturer-independent as possible.

PROFIdrive specifies the configuration, diagnosis, data exchange and state machines with a PROFIBUS master. Furthermore, so-called application classes are defined. There are different versions of the PROFIdrive specification with significant differences. The servo positioning controller DIS-2 48/10 FB follows exclusively version 3.1 (see *chapter 1.2 PROFIBUS documentation*).

The PROFIdrive specification (see *chapter 1.2 PROFIBUS documentation*) also defines a state machine for device control. This state machine is addressed using a control word and a status word. The meaning of the individual bits is also defined in the specification. The functions of these two words have been adopted to a large extent. Manufacturer-specific deviations are related to certain details and documented and marked in one of the following chapters.

The servo positioning controller DIS-2 48/10 FB covers a part of the application classes defined in the PROFIdrive specification.

PROFIBUS-DP does not specify the form and meaning of the useful data themselves. This is why the concept of parameter numbers (PNUs) has been adopted for a PROFIBUS connection. These parameter numbers have an optional subindex and there are pre-defined or reserved areas among these PNUs. In addition, there is room for manufacturer-specific PNUs.

5 PROFIBUS connection

5.1 Introduction

Several steps are required to set up a functional PROFIBUS connection. Some of these settings should or even have to be made prior to activating the PROFIBUS communication. This chapter provides an overview of the required steps. The exact procedure is described in the following chapters.

With the DP-V0 service, data are transmitted in the form of so-called telegrams. The amount of data to be transmitted and their meaning have to be defined for the master and the slave prior to starting the data exchange.

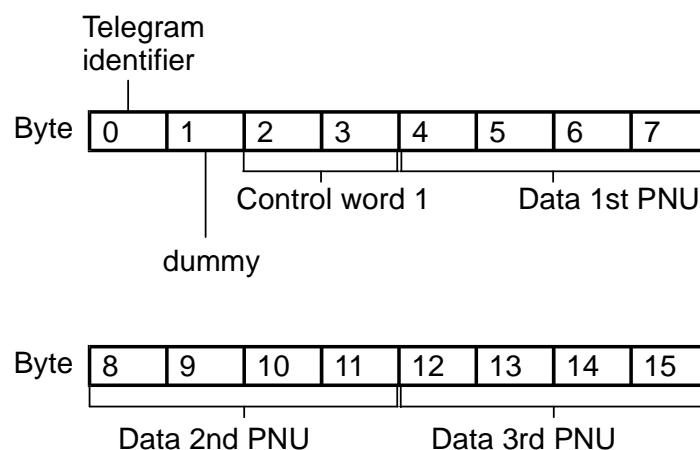


Figure 5.1: Example of the telegram format for the DIS-2 48/10 FB

Figure 5.1 shows the example of a standard servo positioning controller DIS-2 48/10 FB telegram sent from the master to the slave. Apart from the identifier in byte 0, this telegram type requires the PROFIdrive control word 1 in byte 2 and 3 for device control. The content of the other bytes can be configured as desired. In this example, 3 additional data are transmitted, each comprising 4 bytes. This results in a total length of 16 bytes for the telegram.

The user has to make this definition when planning the PROFIBUS connection prior to parameterizing the field bus connection at both ends. The slave should be parameterized first, and then the master. If the parameterisation is correct, the application is immediately ready for operation without any communication error.

5.2 Slave overview

This section provides an overview of slave-related steps for parameterisation and configuration. As some parameters do not become effective until after storage and reset, the following procedure is recommended:

1. Telegram configuration using the *Telegram editor, chapter 6*
2. Selection and parameterisation of *Physical units, chapter 7*
3. Configuration and activation of *Operating parameters, chapter 8*

The meaning of the data at the slave end is defined by entering parameter numbers (PNUs). This is done with the help of the **telegram editor** of the DIS-2 ServoCommander™ parameterisation program. The number of bytes for the PNU is automatically displayed. As a reference, the telegram editor also displays the total length of the telegram.

Important process data with regard to position, speed and acceleration are handed over in the form of **physical units**. These units should be parameterized prior to starting the communication as they define the way the data are interpreted in the servo positioning controller.

Once these steps have been completed, the **operating parameters** of the PROFIBUS connection have to be set. The slave address has to be set correctly prior to activating the communication. Additional options for controlling the address allocation can be activated through an external connection.

5.3 Master overview

This section provides an overview of master-related steps for parameterisation and configuration. The following procedure is recommended:

1. Installation of the **GSD file**
2. Indication of the **slave address**
3. Configuration of the **input and output data**

At the master end, the servo positioning controller has to be integrated into the PROFIBUS. To do so, the **GSD file** has to be installed if this has not been done already. Then the address for the slave and the input and output data have to be configured.

This is now described as an example for the integration under SIEMENS SIMATIC S7.

To integrate the servo positioning controller into the PROFIBUS network, the controller has to be selected in the hardware catalogue. Drag the “DIS-2 FB” folder to the PROFIBUS-DP master system. The **slave address** is inquired immediately afterwards.

Next, the bitmap of the servo positioning controller is displayed at the master system and has to be highlighted. After that, the length of the **input and output data** has to be defined. The associated modules are already prepared in the GSD file. One module for input data and one module for output data with the desired length have to be added to one port.

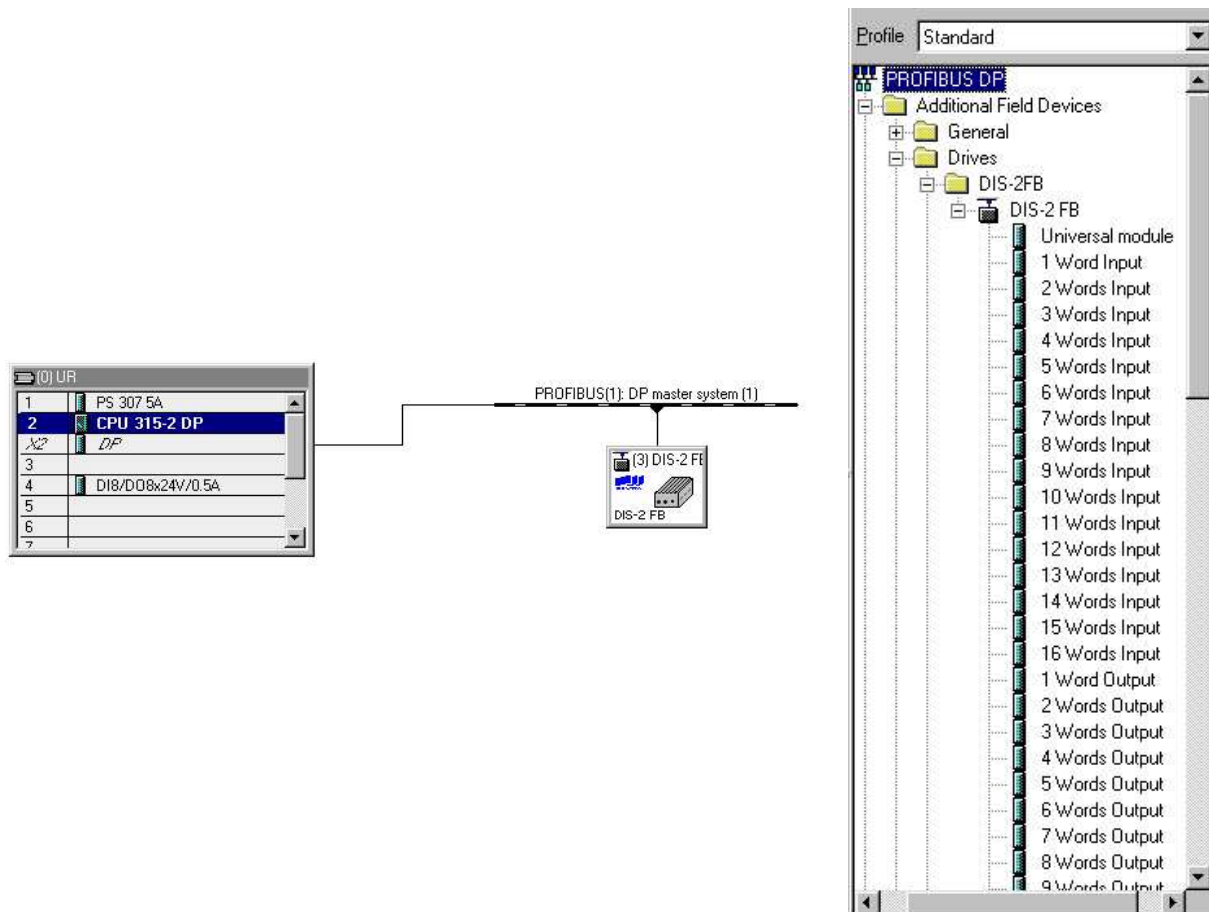


Figure 5.2: Hardware configuration under SIEMENS S7



To ensure trouble-free operation, we recommend defining separate areas for input data and output data (see the example above).

Further information concerning the hardware configuration can be found in *chapter 6 Telegram editor* or in *chapter 13 Function and data blocks for SIEMENS S7* or in the Application Note together with complete example projects including function and data blocks for SIMATIC S7.

6 Telegram editor

6.1 Introduction

The telegram editor is used to define the way the servo positioning controller interprets the data received and sent. The firmware of DIS-2 48/10 FB servo positioning controllers supports the exchange of data using the DP-V0 service. The data are exchanged cyclically in the form of so-called telegrams. The following telegram types can be distinguished:

- ❖ **Reception telegrams:** Data sent from the master to the slave, also called **output data**.
- ❖ **Response telegrams:** Data to be sent from the slave to the master, also called **input data**.

A telegram can contain 10 entries maximum.

In the project of the PROFIBUS master, data areas, e.g. data blocks, are created. The input and output data of the master and of the slave are stored in these data areas. During project planning, the user has to define the contents and their order as well as the size of the two data areas in an identical manner for both the master and the slave.

This parameterisation should be performed prior to activating the communication.

6.2 Reception telegrams

The servo positioning controllers DIS-2 48/10 FB supports 2 reception telegrams. The following table shows how the different reception telegrams are connected to specific operating modes:

| Telegram | Operating mode |
|----------------------|----------------|
| Reception telegram 0 | Positioning |
| Reception telegram 1 | Speed control |

Once a corresponding telegram identifier is read in the servo positioning controller, a check is performed and the associated operating mode is parameterized.

The necessary parameter numbers have to be entered for every reception telegram. They include the information concerning the meaning of the data in the telegram. In the case of reception telegrams 0..2, a so-called control word is entered at address 2 (length: 2 bytes). This consistent convention facilitates the creation of applications and the use of the Metronix example projects for SIEMENS SIMATIC S7. The other entries can be chosen as desired from the object directory of the parameter numbers. The only thing that has to be considered is whether they are suitable. It is, for instance, not possible to enter pure actual value data into reception telegrams.

As far as reception telegrams are concerned, the associated response telegrams have to be selected, too. The user can specify and configure a specific response telegram for every reception telegram. In most cases, however, it is easier to use the same response telegram for all operating modes (reception telegrams 0..2). This reduces the necessary programming workload at the master end. In addition, the master usually requires the same actual value data from the servo positioning controller in all operating modes.

Figure 6.1 shows the example of reception telegram 0 (positioning mode). The entries can be highlighted and changed directly or deleted successively starting with the last entry. When an entry is highlighted, an additional field is displayed into which the parameter number can be entered. New telegram entries are added to the end. An additional diagnostic information is displayed above the button „Change entry“ if a communication could have been established between Master and Slave. The really configured length of the telegram from Master to Slave is displayed.

The screenshot shows the 'Profibus telegram editor' window. It has a 'Telegram type' section with 'Receive telegram' selected (Master >> Slave) and 'Respond telegram' (Slave >> Master). Below is the 'telegram editor' section with a dropdown set to 'Receive telegram 0'. A table lists five entries: ADR = 1 (Entry = 2010.0, 1 Byte), ADR = 2 (Entry = 967.0, 2 Bytes), ADR = 4 (Entry = 1001.0, 4 Bytes), ADR = 8 (Entry = 1001.1, 4 Bytes), and ADR = 12 (Entry = 1001.5, 4 Bytes). To the right of the table are buttons for 'Change entry', 'Append entry', and 'Delete last entry'. Above the 'Change entry' button, it says 'Parameterized telegram length 16 Bytes (DP-Master)'. Below the table, it shows 'Used Memory: 16 Bytes'. At the bottom, there is a 'corresponding' dropdown set to 'Respond telegram 0' and a 'Parameterized telegram length 20 Bytes (DP-Master)' label. An 'OK' button with a green checkmark is at the bottom left.

| ADR | Entry | Length |
|----------|----------------|-----------|
| ADR = 1 | Entry = 2010.0 | (1 Byte) |
| ADR = 2 | Entry = 967.0 | (2 Bytes) |
| ADR = 4 | Entry = 1001.0 | (4 Bytes) |
| ADR = 8 | Entry = 1001.1 | (4 Bytes) |
| ADR = 12 | Entry = 1001.5 | (4 Bytes) |

Figure 6.1: Composition of a reception telegram

The example telegram in Figure 6.1 transmits the following parameters:

| Address | Content (parameter number) | Description |
|---------|--------------------------------|--|
| 0 | Identifier (= 0xE0) | Fixed identifier |
| 1 | 8-bit placeholder (PNU 2010 0) | free |
| 2 | Control Word 1 (PNU 967 0) | Control word for device control, has to be under this address |
| 4 | Target position (PNU 1001 0) | Target position, indication with the physical unit of a position set for PROFIBUS |
| 8 | Profile velocity (PNU 1001 1) | Profile velocity during positioning, indication with the physical speed unit set for PROFIBUS |
| 12 | Acceleration (PNU 1001 5) | Combination of the values for acceleration and deceleration, indication with physical unit for acceleration set for PROFIBUS |

Detailed information on parameter numbers can be found in *chapters 9 Device control*, *10 Manufacturer-specific parameter numbers* and *12 Profile-specific parameter numbers*.

6.3 Response telegrams

The firmware of the servo positioning controller DIS-2 48/10 FB supports 2 response telegrams.

The necessary parameter numbers have to be entered for every response telegram. They include the information concerning the meaning of the data in the telegram. In the case of reception telegrams 0..2, a so-called status word is entered at address 2 (length: 2 bytes). This consistent convention facilitates the creation of applications and the use of the Metronix example projects for SIEMENS SIMATIC S7. The other entries can be chosen as desired from the object directory of the parameter numbers. The only thing that has to be considered is whether they are suitable. It is, for instance, not possible to enter write-only parameters into response telegrams.

Figure 6.2 shows the example of response telegram 0 (positioning mode). The entries can be highlighted and changed directly or deleted successively starting with the last entry. When an entry is highlighted, an additional field is displayed into which the parameter number can be entered. New telegram entries are added to the end. An additional diagnostic information is displayed above the button „Change entry“ if a communication could have been established between Master and Slave. The really configured length of the telegram from Master to Slave is displayed.

Figure 6.2: Composition of a response telegram

The telegram shown in Figure 6.2 transmits the following parameters:

| Addresses | Content (parameter number) | Description |
|-----------|------------------------------------|---|
| 0 | Identifier (= 0xF0) | Fixed identifier |
| 1 | Operating mode (PNU 1500 0) | Current operating mode of the servo positioning controller |
| 2 | Status word 1 (PNU 968 0) | Status word for device control, has to be under this address |
| 4 | Position actual value (PNU 1100 0) | Current actual position, indication with the physical unit of a position set for PROFIBUS |
| 8 | Velocity actual value (PNU 1101 0) | Current actual speed value, indication with the physical speed unit set for PROFIBUS |
| 12 | Current actual value (PNU 1102 0) | Actual value of the current, indicated per thousand referring to the nominal motor current |
| 16 | Digital inputs (PNU 1141 0) | Current status of the digital inputs, see for the meaning of the bits in the detailed description of the PNU. |

Detailed information on parameter numbers can be found in *chapters 9 Device control, 10 Manufacturer-specific parameter numbers, 11 Operating modes and 12 Profile-specific parameter numbers*.

7 Physical units

For trouble-free operation, the units of the process data transmitted on the field bus have to be defined. They can be set in the menu **Physical units Profibus** called by **Parameters/Fieldbus/Profibus**. **The parameters of the physical units should be set once and then remain unchanged during a running application.**

Unit-related factors are calculated internally so that all the user has to do is to select the desired unit. The gear ratio and the feed constant are stated as separate parameters.

Figure 7.1 shows the physical unit set-up menu of the DIS-2 ServoCommander™ program.

The screenshot shows a dialog box titled "Physical units Profibus". It has several sections with dropdown menus and input fields. The "Position" section has a dropdown menu set to "Revolutions/1000 [R/1000]". The "Speed" section has a dropdown menu set to "Revolutions per minute [r/min]". The "Acceleration" section has a dropdown menu set to "[Revolutions per minute]/second [r/min/s]". The "Feed constant" section has a text input field containing "1,0000000000" and a dropdown menu set to "No unit []". The "Gearbox" section has two input fields: "Drive:" with the value "1" and "Output:" with the value "1". At the bottom, there are two buttons: "OK" with a green checkmark icon and "Cancel" with a red X icon.

Figure 7.1: Setting of physical units

When the physical units are entered, the firmware automatically calculates conversion factors. They consist of a numerator and a denominator which can comprise a maximum of 32 bits each. If an overflow occurs when the factors are entered, the value will be rejected. In this case, the factors or the physical units have to be corrected.

It has to be taken into consideration that some quantities cannot always be used in a sensible manner. A purely rotative system, for example, does not require a feed constant. Apart from this, the feed constant has a physical unit. If this unit is not parameterized correctly, the feed constant will be ignored.

Example:

1. Position in revolutions, feed constant in mm/revolution:



=> The feed constant will be **ignored**.

2. Position in mm, feed constant without a unit:

=> The feed constant will be **considered** like a gear ratio.

3. Position in mm, feed constant in $\mu\text{m}/\text{revolution}$

=> The feed constant will be **considered** with the factor 1000.



The value of the feed constant will be ignored for the associated physical unit, if the feed constant has a translatable unit and a rotary unit has been selected for the physical quantity.

Problems might arise during operation only if the internal value or the value entered externally cannot be represented following the conversion. In such a case, an error is issued and the setting of the physical units has to be checked.

During the parameterisation of the display units intermediate states may occur in which the physical units have an overflow. This case generates the error 59 "general arithmetic error". Perform Save & Reset in order to find out if the parameterisation is really invalid. If no error 59 is active after Reset, the settings are valid.



Perform Save & Reset if an error 59 occurs during the parameterisation of the physical units. The physical units are valid if there is no error after Reset.

Figure 7.2 shows the interpretation of the gear ratio. In the menu **Physical units Profibus** of the ServoCommander™ parameterisation program, the value "Incoming shaft" refers to U_{EIN} , the value "Outgoing shaft" to U_{AUS} .

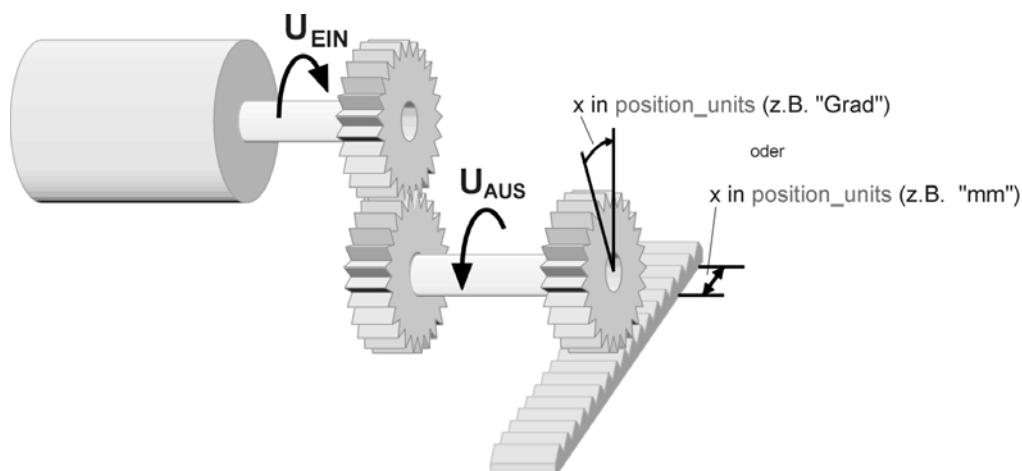


Figure 7.2: Gear ratio

Example:



If the motor performs 10 revolutions and a gear connected to the output performs one revolution, this corresponds to the following entries:

Ingoing shaft: 10

Outgoing shaft: 1

Now the system can be parameterized using the units of the output (outgoing shaft).

The gear ratio and the feed constant are defined as positive values.

If the orientation of the application has to be changed, this can be done in the software DIS-2 ServoCommander™ in the window „commands “.

8 Operating parameters

This chapter describes all the necessary measures to set up a communication using PROFIBUS-DP. The parameters described in the following sections are set via the serial interface using the DIS-2 ServoCommander™ program.

8.1 PROFIBUS operating parameters

At the servo positioning controller end, only the slave address has to be entered to configure the communication. After this, the communication can be activated. It has to be taken into consideration that the PROFIBUS communication is not activated until a reset is performed. Deactivation, however, is always done immediately. Figure 8.1 shows the window of the parameterisation program used to set the operating parameters.

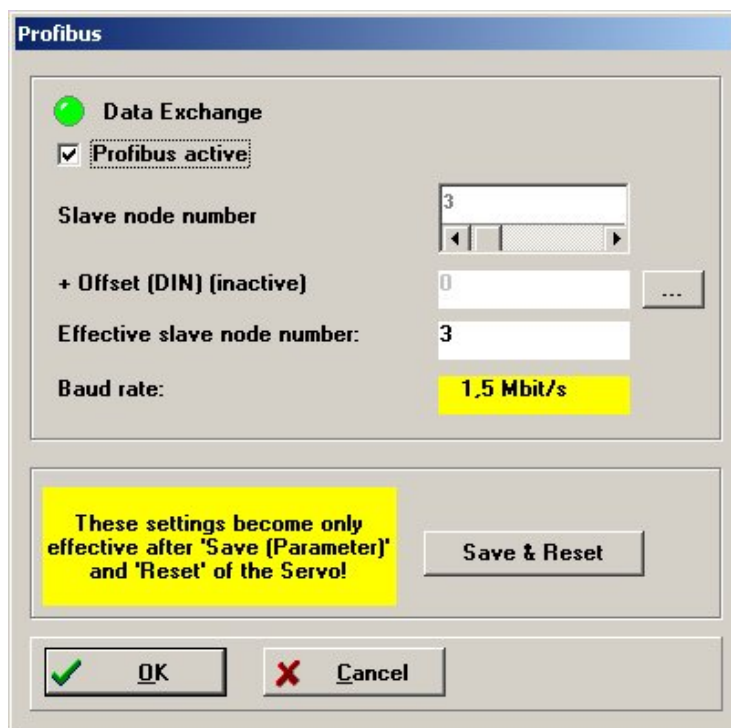


Figure 8.1: Setting of operating parameters

When the communication has been activated, the base value of the slave address can no longer be changed.

Starting at the base value, it is possible to increase the slave address using options and a suitable hardware connection. The digital inputs DIN0..3 and the analogue inputs AIN1 and AIN2 are intended for this purpose. The states of the inputs are read once immediately after a reset and used to calculate the effective slave address. Later changes have no effect. The options have different values:

| Option | Active at | Value |
|----------------------|-----------|------------|
| Addition of DIN0..5 | + 24 V DC | 0..63 |
| Addition of DIN4 + 5 | + 24 V DC | 16, 32, 48 |

The baud rate of the PROFIBUS communication is automatically recognized by the hardware used. The automatically detected baud rate is displayed in this menu if a connection between Master and Slave could have been established successfully. The following baud rates are supported by servo positioning controllers of the DIS-2 48/10 FB product range:

| Baud rate |
|-------------|
| 9.6 kBaud |
| 19.2 kBaud |
| 45.45 kBaud |
| 93.75 kBaud |
| 187.5 kBaud |
| 500.0 kBaud |
| 1.5 MBaud |
| 3.0 MBaud |
| 6.0 MBaud |
| 12.0 MBaud |

9 Device control

9.1 Overview

To make the control of a field device (slave) independent from the various manufacturers, two data words have been specified in the PROFIdrive specification (4). **Control word 1** is used to control the major device functions by the master whereas the status of the device is read back in **status word 1**. The PROFIdrive profile defines the order in which certain bits have to be set, e.g. to enable the power stage of the servo controller.

Device control of servo positioning controllers DIS-2 48/10 FB follows the state diagram specified in the PROFIdrive profile. The implementation and potential manufacturer-specific deviations are described in detail in *chapter 9.4 State diagram and device control*.

The implementation of the control word and the status word only follows the PROFIdrive specification. Deviations from the specifications are marked. In addition, some bits have different meanings depending on the operating mode. In the following chapters, first the control word and then the status word are described. Then the device control mechanism using these two data words is explained.

9.2 Control word 1

Control Word 1 is used to control various device functions, e.g. controller enabling. Some bits have corresponding meanings. The use of these bits is described in *chapter 9.4 State diagram and device control*. The meaning of the individual bits follows the PROFIdrive profile. In addition, some functions are a manufacturer-specific and some bits have a manufacturer-specific functionality.

| | |
|----------------------|----------------|
| PNU | 967 |
| Subindex | 0 |
| Name | Control word 1 |
| Data type | UINT16 |
| Access | rw |
| Unit | - |
| Value range | - |
| Default value | 0 |

In reception telegrams 0..2, control word 1 is bound to a fixed position. The system evaluates the control word always as the last datum. This means that new target positions are written first. A command to start a positioning run, which is transmitted simultaneously, therefore always refers to the data transmitted in the same telegram.

Some bits have different meanings depending on the operating mode. The two following tables show the meanings for the two operating modes.

| Bit | Meaning | Behaviour |
|-------|--|---|
| 0 | ON / OFF (OFF 1) | See the "Device control" section, <i>chapter 9.4 State diagram and device control</i> |
| 1 | No coast stop (no OFF 2) / coast stop (OFF 2) | |
| 2 | No quick stop (no OFF 3) / quick stop (OFF 3) | |
| 3 | Enable Operation / Disable Operation | |
| 4* | 1: Enable ramp generator 0: Reset ramp generator | 1: All speed setpoints enabled 0: All speed setpoints disabled |
| 5* | 1: Unfreeze ramp generator 0: Freeze ramp generator | 1: Setpoint ramp enabled 0: Ramp stopped (frozen) |
| 6* | 1: Enable setpoint 0: Disable setpoint | 1: All setpoint inputs for the ramp enabled 0: All setpoint inputs for the ramp deactivated |
| 7 | Fault acknowledge (edge from 0->1) | Active errors are acknowledged if possible |
| 8* | Jog 1 ON / Jog 1 OFF | The speed of motion of the "positive jogging" position set is preset as a speed setpoint through the ramp |
| 9* | Jog 2 ON / Jog 2 OFF | The speed of motion of the "negative jogging" position set is preset as a speed setpoint through the ramp |
| 10 | 1: Control by PLC 0: No control by PLC | 1: Control word evaluated 0: Control word not evaluated |
| 11* | Device-specific | free |
| 12-15 | Device-specific | free |

*: Different meaning in another operating mode.

Table 9.1: Control word 1 for speed control mode

| Bit | Meaning | Behaviour |
|-------|---|---|
| 0 | ON / OFF (OFF 1) | See the "Device control" section, <i>chapter 9.4 State diagram and device control</i> |
| 1 | No coast stop (no OFF 2) / coast stop (OFF 2) | |
| 2 | No quick stop (no OFF 3) / quick stop (OFF 3) | |
| 3 | Enable Operation / Disable Operation | |
| 4* | 1: Do not reject traversing task 0: Reject traversing task | 0: The current positioning run is cancelled or no positioning is started 1: No action |
| 5* | 1: No intermediate stop 0: Intermediate stop | 0: No action or no positioning is started 0 -> 1: Acceleration to motion speed in accordance with the current position set 1: No action 1 -> 0: Stopping with deceleration in accordance with current position set |
| 6* | 0 -> 1: Activate traversing task *** | Manufacturer-specific implementation: 0 -> 1: Start of the positioning run under the set position data set ¹⁾ if boundary conditions ²⁾ are fulfilled |
| 7 | Fault acknowledge (edge from 0->1) | Active errors are acknowledged if possible |
| 8* | Jog 1 ON / Jog 1 OFF | Manufacturer-specific implementation: 0 -> 1: Start of positioning in accordance with "positive jogging" position set 1 -> 0: Stop with deceleration in accordance with "positive jogging" position set |
| 9* | Jog 2 ON / Jog 2 OFF | Manufacturer-specific implementation: 0 -> 1: Start of positioning in accordance with "negative jogging" position set 1 -> 0: Stop with deceleration in accordance with "negative jogging" position set |
| 10 | 1: Control by PLC 0: No control by PLC | 1: Control word evaluated 0: Control word not evaluated |
| 11* | Start / Stop homing procedure | 1: (No action) Continue homing 1 -> 0: Homing still active: Termination of homing without error Homing already terminated: No action 0: No action 0 -> 1: Start of homing ³⁾ |
| 12** | Relative / absolute | At positioning start: 1: Relative positioning 0: Absolute positioning |
| 13** | Interrupt current positioning / add | At positioning start: 1: Interrupt current positioning, immediately start new positioning. 0: Add positioning to the end of the running positioning |
| 14,15 | Device-specific | |

- *: Different meaning in another operating mode.
 **: Manufacturer-specific bit
 ***: Manufacturer-specific deviation from PROFIdrive specification

Table 9.2: Control word 1 for positioning mode

Notes concerning Table 9.2:

- ¹⁾: The command “Activate traversing” starts the position set selected through PNU 1002 0. If the PROFIBUS position set is started, the current options of control word 1 will be adopted. Otherwise the options of the corresponding position set will take effect.
- ²⁾: The following boundary conditions apply to the start of a positioning:
- Bit 4 = 1 (Do not reject traversing task)
 - Bit 5 = 1 (No intermediate stop)
 - No homing active
- ³⁾: Parameterizable options are taken into account, e.g. “with following positioning”.

Chapter 9.4 State diagram and device control describes the device control. The servo positioning controller takes on various states. Defined transitions can be performed between these states. The transitions are triggered by so-called commands through bits 0..3. The commands are described in detail in chapter 9.4 State diagram and device control. The following tables shows an overview of the commands:

| Command: | Bit 3 | Bit 2 | Bit 1 | Bit 0 | State transitions |
|--------------------------|-------------------|-------------------|-------------------|-------------------|-------------------|
| | 0008 _h | 0004 _h | 0002 _h | 0001 _h | |
| OFF | × | 1 | 1 | 0 | 1, 5, 11 |
| ON | × | 1 | 1 | 1 | 2 |
| Coast Stop | × | × | 0 | × | 6, 7, 8 |
| Quick Stop | × | 0 | 1 | × | 9, 10, 12 |
| Disable Operation | 0 | 1 | 1 | 1 | 4 |
| Enable Operation | 1 | 1 | 1 | 1 | 3 |

Table 9.3: Overview of all commands (× = not relevant)



As some state transitions take a certain time, all status changes that are triggered through **control word 1** have to be read back through **status word 1**. It is only when the requested status can also be read in **status word 1**, that another command can be written in through **control word 1**.

9.3 Status word 1

Status word 1 reflects various device states, e.g. an active controller enabling. Some bits have corresponding meanings. All this is described in *chapter 9.4 State diagram and device control*. The meaning of the bits follows the PROFIdrive profile. In addition, some functions are manufacturer-specific and some bits have a manufacturer-specific functionality.

| | |
|----------------------|---------------|
| PNU | 968 |
| Subindex | 0 |
| Name | Status word 1 |
| Data type | UINT16 |
| Access | ro |
| Unit | - |
| Value range | - |
| Default value | - |

In response telegrams 0..2, status word 1 is bound to a fixed position.

Some bits have different meanings depending on the operating mode. The two following tables show the meaning for the two operating modes.

| Bit | Meaning | Behaviour |
|-----|--|--|
| 0 | 1: Ready To Switch On 0: Not Ready To Switch On | See the "Device control" section, <i>chapter 9.4 State diagram and device control</i> |
| 1 | 1: Ready To Operate 0: Not Ready To Operate | |
| 2 | 1: Operation Enabled 0: Operation Disabled | |
| 3 | 1: Fault Present 0: No Fault Present | 1: Active faults 0: No fault active |
| 4 | 1: No OFF2 0: OFF2 | 1: No OFF2 command active 0: OFF2 command (control word 1, power stage OFF) active |
| 5 | 1: No OFF3 0: OFF3 | 1: No OFF3 command active 0: OFF3 command (control word 1, quick stop) active |
| 6 | 1: Switching On Inhibited 0: Switching On Not Inhibited | See the "Device control" section |
| 7 | 1: Warning Present 0: No Warning Present | 1: Active warning and/or setpoint disabling through limit switch active in at least one direction of rotation 0: No warning active |
| 8* | 1: Speed error within tolerance range 0: Speed error out of tolerance range | 1: The actual speed is within the parameterizable message window around the target speed 0: The actual speed is out of the parameterizable message window around the target speed |
| 9 | 1: Control by PLC 0: No control by PLC | Mirroring of bit 10 of control word 1 |

| | | |
|--------|--|--|
| 10* | 1: f or n reached 0: f or n not reached | 1: Actual speed > freely parameterizable reference speed ¹⁾ 0: Actual speed < freely parameterizable reference speed ¹⁾ |
| 11-13* | Device-specific | Free |
| 14-15 | Device-specific | Free |

*: Different meaning in another operating mode.

Table 9.4: Status word 1 for speed control mode

¹⁾: For this comparison, the sign character is always taken into consideration, i.e. the comparison is not based on the sum of the actual speed and the reference speed.

| Bit | Meaning | Behaviour |
|-----|--|---|
| 0 | 1: Ready To Switch On 0: Not Ready To Switch On | See the "Device control" section, <i>chapter 9.4 State diagram and device control</i> |
| 1 | 1: Ready To Operate 0: Not Ready To Operate | |
| 2 | 1: Operation Enabled 0: Operation Disabled | |
| 3 | 1: Fault Present 0: No Fault Present | 1: Active faults 0: No fault active |
| 4 | 1: No OFF2 0: OFF2 | 1: No OFF2 command active 0: OFF2 command (control word 1, power stage OFF) active |
| 5 | 1: No OFF3 0: OFF3 | 1: No OFF3 command active 0: OFF3 command (control word 1, quick stop) active |
| 6 | 1: Switching On Inhibited 0: Switching On Not Inhibited | See the device control section |
| 7 | 1: Warning Present 0: No Warning Present | 1: Active warning and/or setpoint disabling through limit switch active in at least one direction of rotation 0: No warning active |
| 8* | 1: Following error within tolerance range 0: Following error out of tolerance range | 1: No following error 0: Following error message active |
| 9 | 1: Control by PLC 0: No control by PLC | Mirroring of bit 10 of control word 1 |
| 10* | 1: Target position reached 0: Not at target position | 1: The current positioning run has been completed and the actual position is within the target window 0: The current positioning run is still active or the actual position is not within the target window. |
| 11* | 1: Home position valid 0: Home position not valid | 1: A homing run has been completed successfully 0: No homing run has been performed or the position information is invalid due to an error. |
| 12* | Traversing Task Acknowledge | See detailed description |

| | | |
|-------|--|--|
| 13* | 1: Drive stopped 0: Drive in motion | 1: The actual speed is within a fixed tolerance window around 0. No active positioning or active quick stop. 0: The actual speed is out of the tolerance window around 0 or the condition above is not fulfilled. |
| 14-15 | Device-specific | Free |

*: Different meaning in another operating mode.

Table 9.5: Status word 1 for positioning mode

Just like the combination of several bits of **control word 1** can trigger several state transitions, the combination of several bits of **status word 1** can indicate the state of the servo positioning controller. The following table shows the possible states of the state diagram and the associated bit combination used to indicate the states in **status word 1**.

| Status | Bit 6 | Bit 2 | Bit 1 | Bit 0 | Mask | Value |
|------------------------|-------------------|-------|-------|-------|-------------------|-------------------|
| | 0040 _h | | | | | |
| SWITCH_ON_INHIBITED | 1 | 0 | 0 | 0 | 0047 _h | 0040 _h |
| READY_FOR_SWITCHING_ON | 0 | 0 | 0 | 1 | 0047 _h | 0001 _h |
| SWITCHED_ON | 0 | 0 | 1 | 1 | 0047 _h | 0003 _h |
| OPERATION | 0 | 1 | 1 | 1 | 0047 _h | 0007 _h |

Table 9.6: Device status (× = not relevant)

Bits 4 and 5 depend on the command and therefore are not included in Table 9.6.

9.4 State diagram and device control

This chapter describes how DIS-2 48/10 FB servo positioning controllers are controlled with the help of the two data words “control word 1” (PNU 967) and “status word 1” (PNU 968), i.e. how the power stage is activated, for example. This control mechanism follows the specification of the PROFIdrive profile. The following terms are used for the explanation of the context:

State: Depending on whether the power stage has been activated, for example, or whether a fault has occurred, the servo positioning controller is in different states. The states defined under PROFIdrive will be described in this chapter.

Example: **SWITCHING_ON_INHIBITED**

State transition Just like the states, also the transitions between the states are defined under PROFIdrive. Transition means getting from one state to another. The master triggers state transitions by setting bits in **control word 1**. The servo positioning controller can also trigger a state transition internally when it detects a fault.

Command To trigger state transitions, certain combinations of bits have to be set in **control word 1**. Such a combination is referred to as a command.

Example: **Enable Operation**

State diagram The states and the state transitions form the state diagram, i.e. an overview of all states and possible transitions.

9.4.1 State diagram

The states have been taken over to a large extent from the PROFIdrive specification. PROFIdrive distinguishes between a ramp stop and a quick stop. In firmware 3.0, the controller enabling is deactivated in both cases so that the simplified state diagram shown in Figure 9.1 results.

After it has been switched on, the servo positioning controller initializes and finally reaches the **SWITCHING_ON_INHIBITED** state. The power stage is deactivated and the motor shaft can be rotated freely, if no holding brake in the motor. Via state transitions **1**, **2** and **3**, the **OPERATION** state is reached. This state corresponds to the controller enabling through PROFIBUS. In this state, the power stage is activated and the drive is controlled as defined by the operating mode set. Make sure that the servo positioning controller has been parameterized correctly and that an associated setpoint equals zero.

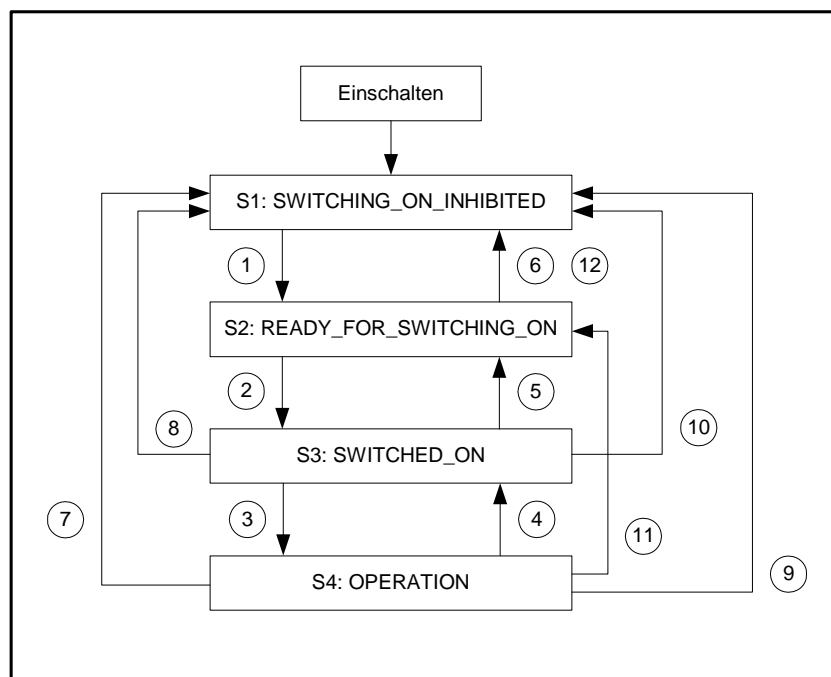


Figure 9.1: Simplified state diagram

State transition **4** corresponds to the cancellation of the controller enabling, i.e. a running motor is slowed down to standstill following a set emergency stop ramp. State transition **7** corresponds to the cancellation of the power stage enabling, i.e. a running motor would coast down in an uncontrolled manner.

If a fault occurs (no matter in which state), the system is led to the **SWITCHING_ON_INHIBITED** state. Depending on the severity of the fault, certain actions, e.g. an emergency stop, can be performed before this state is reached.

The states and their meanings are listed in the following table:

| Name | Meaning |
|-------------------------------|--|
| Switching on | The servo positioning controller performs a self-test. The PROFIBUS communication does not work yet. |
| SWITCHING_ON_INHIBITED | The servo positioning controller has completed its self-test. PROFIBUS communication is possible. |
| READY_FOR_SWITCHING_ON | The servo positioning controller waits until the digital inputs "power stage enable" and "controller enable" are connected to 24 V. (Controller enabling logic „Din9 and Profibus“). |
| SWITCHED_ON | Power stage enabling is active. |
| OPERATION | The motor is connected to power and is controlled as defined by the operating mode. |

9.4.2 Device control

To perform the state transitions described in *chapter 9.4.1 State diagram*, certain bit combinations have to be set in **control word 1** (see below). The lowest 4 bits of **control word 1** are evaluated together to trigger a state transition. In the following section, only the most important state transitions 1, 2, 3, 4, 7 and 11 are explained. A table showing all possible states and state transitions can be found in *chapter 9.4.3 Command overview*.

The first column of the following table shows the desired state transition, and the second column the requirements which have to be fulfilled for this transition (in most cases a command coming from the host, indicated by a frame in the table). The creation of this command, i.e. the bits which have to be set in **control word 1**, is shown in the third column (x = not relevant). Bit 10 in **control word 1** has always to be set to control the servo positioning controller. After the state transition, the new state can be recognised by evaluating the relevant bits in **status word 1**. This is shown in the last column.

| No. | Will be performed if | Bit combination for control word 1 | | | | | Action | Status word 1 ¹⁾ |
|----------|---|------------------------------------|---|---|---|---|--------|-----------------------------|
| | | Bit | 3 | 2 | 1 | 0 | | |
| 1 | Power stage and controller enabling present + no coast stop + no quick stop + command OFF | OFF | x | 1 | 1 | 0 | None | 0x0201 |

| No. | Will be performed if | Bit combination for control word 1 | | | | | Action | Status word 1 ¹⁾ |
|-----|----------------------------------|------------------------------------|-------|-------|-------|-------|--|-----------------------------|
| | | | Bit 3 | Bit 2 | Bit 1 | Bit 0 | | |
| 2 | Command ON | ON | 0 | 1 | 1 | 1 | | 0x0203 |
| 3 | Command Enable Operation | Enable Operation = | 1 | 1 | 1 | 1 | Activation of power stage enabling and control in accordance with operating mode set | 0x0207 |
| 4 | Command Disable Operation | Disable Operation | 0 | 1 | 1 | 1 | Cancellation of controller enabling | 0x0203 |
| 11 | Command OFF | OFF | x | 1 | 1 | 0 | Cancellation of controller enabling | 0x0201 |
| 7 | Command Coast Stop | Coast Stop | x | x | 0 | x | Power stage is disabled. The motor coasts down and can be rotated freely. | 0x0250 or 0x0270 |

¹⁾: After completion of the state transition. The mask for the relevant bits is 0x0277

Table 9.7: Most important state transitions of the servo positioning controller

The following example shows the enabling of the servo positioning controller, i.e. the enabling of the controller via the PROFIBUS field bus:

EXAMPLE

The servo positioning controller is to be "enabled", i.e. the power stage and the controller enabling are to be activated via PROFIBUS:

- 1.) The servo positioning controller is in the **SWITCH_ON_INHIBITED** state
- 2.) The servo positioning controller has to change over to the **OPERATION** state
- 3.) According to the state diagram (Figure 9.1), state transitions 1, 2 and 3 have to be performed.
- 4.) The following results from Table 9.7:

| | |
|---|---|
| Transition 1: Control Word 1 = 0406 _h | New state: READY_FOR_SWITCHING_ON ^{*1)} |
| | Status Word 1 = 0x0201 |
| Transition 2: Control Word 1 = 0407 _h | New state: SWITCHED_ON ^{*1)} |
| | Status word 1 = 0x0203 |
| Transition 3: Control Word 1 = 040F _h | New state: OPERATION ^{*1)} |
| | Status Word 1 = 0x0207 |

Note:

- 1.) The example assumes that no other bits are set in **control word 1**. Bit 10 must be set. Otherwise, only bits 0..3 are relevant for the transitions.

^{*1)} The master has to wait until the state can be read back in **status word 1** in the relevant bits (mask = 0x0277). This will be explained in detail later in this manual.



9.4.3 Command overview

The following table shows the commands for the state transitions described in *chapter 9.4.1 State diagram*:


| No | Will be performed if | Bit combination for control word 1 | | | | | Action | Status word 1 ¹⁾ |
|----|---|------------------------------------|-------|---|---|---|---|-----------------------------|
| | | | Bit 3 | 2 | 1 | 0 | | |
| 1 | Power stage and controller enabling present + no Coast Stop + no Quick Stop + command OFF | OFF = | x | 1 | 1 | 0 | None | 0x0201 |
| 2 | Command ON | ON = | 0 | 1 | 1 | 1 | | 0x0203 |
| 3 | Command Enable Operation | Enable Operation = | 1 | 1 | 1 | 1 | Activation of power stage enabling and Control in accordance with adjusted operating mode | 0x0207 |
| 4 | Command Disable Operation | Disable Operation = | 0 | 1 | 1 | 1 | Cancellation of controller enabling | 0x0203 |
| 5 | Command OFF | OFF = | x | 1 | 1 | 0 | Cancellation of controller enabling | 0x0201 |
| 6 | Command Coast Stop | Coast Stop = | x | x | 0 | x | None | 0x0250 resp. 0x0270 |
| 7 | Command Coast Stop | Coast Stop = | x | x | 0 | x | The power stage is disabled. The motor coasts down and can be rotated freely. | 0x0250 resp. 0x0270 |
| 8 | Command Coast Stop | Coast Stop = | x | x | 0 | x | Cancellation of power stage enabling | 0x0250 resp. 0x0270 |
| 9 | Command Quick Stop | Quick Stop = | x | 0 | 1 | x | Cancellation of controller enabling | 0x0260 |
| 10 | Command Quick Stop | Quick Stop = | x | 0 | 1 | x | Cancellation of controller enabling | 0x0260 |
| 11 | Command OFF | OFF = | x | 1 | 1 | 0 | Cancellation of controller enabling | 0x0201 |

| No | Will be performed if | Bit combination for control word 1 | | | | | Action | Status word 1 ¹⁾ |
|----|---------------------------|------------------------------------|-------|---|---|---|-------------------------------------|-----------------------------|
| | | | Bit 3 | 2 | 1 | 0 | | |
| 12 | Command Quick Stop | Quick Stop = | x | 0 | 1 | x | Cancellation of controller enabling | 0x0260 |

¹⁾: After completion of the state transition. The mask for the relevant bits is 0x0277


Table 9.8: Overview of all state transitions of the servo positioning controller

It has to be taken into consideration that some quantities do not always make sense. A purely rotatory system, for example, does not require a feed constant. Apart from that, the feed constant has a physical unit. If this unit has not been parameterized correctly, the feed constant will be ignored.




Power stage disabled...

...means that the power semiconductors (transistors) are no longer activated. **If this state is assumed while the motor is running, the motor will coast down.** A motor brake which might be present, will be put on automatically.



Caution: The signal does not guarantee that the motor is really disconnected from power.



Power stage enabled...

...means that the motor is controlled as defined by the selected operating mode. A motor brake which might be present will be released automatically. In the event of a defect or incorrect parameterisation (motor current, number of poles, encoder offset angle etc.) the drive might react in an uncontrolled manner.

10 Manufacturer-specific parameter numbers

10.1 Overview

The following table provides an overview of currently implemented PNUs:

| PNU | Sub-index | Description | Type | Access |
|------|-----------|--|--------|--------|
| 1000 | 0 | Position set number (read/write) | UINT16 | rw |
| 1001 | - | (Position data) | | |
| | 0 | Target position | INT32 | rw |
| | 1 | Profile velocity | INT32 | rw |
| | 3 | Acceleration (positioning) | UINT32 | rw |
| | 4 | Deceleration (positioning) | UINT32 | rw |
| | 5 | Acceleration and deceleration (positioning) | UINT32 | rw |
| 1002 | 0 | Start set number | UINT8 | rw |
| 1003 | 0 | Profile type of the position sets | INT16 | rw |
| 1010 | 0 | Target velocity | INT32 | rw |
| 1011 | - | (Accelerations for velocity control) | | |
| | 0 | Acceleration (velocity control) | UINT32 | rw |
| | 1 | Deceleration (velocity control) | UINT32 | rw |
| | 2 | All accelerations (velocity control) | UINT32 | rw |
| 1022 | - | (Current limitation) | | |
| | 0 | Selector for current limitation | INT8 | rw |
| | 1 | read / write setpoint for current limitation | INT32 | rw |
| 1040 | - | (Jogging) | | |
| | 0 | Jogging velocities (symmetrical) | INT32 | rw |
| | 1 | Jogging accelerations (symmetrical) | UINT32 | rw |
| 1050 | 0 | Homing method | INT8 | rw |
| 1051 | 0 | Homing offset | INT32 | rw |
| 1100 | 0 | Position actual value | INT32 | ro |
| 1101 | 0 | Velocity actual value | INT32 | ro |

| | | | | |
|------|---|--|---------------|----|
| 1102 | 0 | Current actual value | INT32 | ro |
| 1140 | 0 | Digital outputs | UINT32 | rw |
| 1141 | 0 | Digital inputs | UINT32 | ro |
| 1150 | 0 | DC-bus voltage | UINT32 | ro |
| 1160 | 0 | Power stage temperature | INT16 | ro |
| 1290 | - | (Motor data) | | |
| | 0 | I ² t time motor | UINT16 | rw |
| | 1 | I ² t ratio motor | UINT16 | ro |
| 1350 | 0 | Controller enable | UINT16 | rw |
| 1500 | 0 | Operating mode | UINT8 | ro |
| 1601 | - | (Error code) | | |
| | 0 | Error field 0 | UINT32 | ro |
| | 1 | Error field 1 | UINT32 | ro |
| 1610 | - | (Error management) | | |
| | 0 | Error number | UINT8 | rw |
| | 1 | Error reaction code | UINT8 | rw |
| 2000 | 0 | Entry for manufacturer specific PKW access | 2 * UINT32 | rw |
| 2010 | - | (Placeholder) | | |
| | 0 | 8-bit placeholder (blank element) | UINT8 | rw |
| | 1 | 16-bit placeholder (blank element) | UINT16 | rw |
| | 2 | 32-bit placeholder (blank element) | UINT32 | rw |
| 2011 | 0 | 32-bit placeholder (blank element) | UINT32 | rw |

10.2 PNUs for positioning mode

This section describes the parameters required for the positioning mode.

10.2.1 PNU 1000: Position Set Number

This parameter is used to select the position data set into which the data transmitted through PROFIBUS are entered. This parameter provides access to all position data sets of the servo positioning controller. Field bus data sets are often volatile data sets. The position data set for PROFIBUS, however, can be saved and parameterized with the help of the DIS-2 ServoCommander™ parameterisation program. In this way, parameters, which do not have to be changed in an application during operation, can be defined in a fixed manner. Accelerations, for example, can be entered once and then do not have to be transmitted.

| | |
|----------------------|--|
| PNU | 1000 |
| Subindex | 0 |
| Name | Position Set Number |
| Data type | UINT16 |
| Access | rw |
| Unit | - |
| Value range | 0 .. 68: 0..63: Standard position data sets 64 .. 67: Reserved 68: Position data set PROFIBUS |
| Default value | 68 (Position data set PROFIBUS) |

10.2.2 PNU 1001: Position Data

This parameter number is used to address parameters of the selected position data set. PNU 1000 is used for selection. The following parameters are available:

- Target position
- Profile velocity
- End velocity
- Acceleration and deceleration, either separately or combined for both accelerations

The data are interpreted in the way they were set as physical units. For this purpose, the DIS-2 ServoCommander™ parameterisation software opens a special window (see *chapter 7 Physical units*).

This PNU can also be used to parameterize parameters for jogging, for example. To do so, the position data set number has to be set accordingly. Then the jogging speed can be set with the help of the profile velocity.

| | |
|-------------|---------------|
| PNU | 1001 |
| Name | Position Data |

| | |
|----------------------|------------------------------------|
| Subindex | 0 |
| Name | Target Position |
| Data type | INT32 |
| Access | rw |
| Unit | Physical unit of PROFIBUS position |
| Value range | - |
| Default value | 0 |

| | |
|----------------------|------------------------------------|
| Subindex | 1 |
| Name | Profile Velocity |
| Data type | INT32 |
| Access | rw |
| Unit | Physical unit of PROFIBUS velocity |
| Value range | - |
| Default value | 1000 rpm |

| | |
|----------------------|--|
| Subindex | 3 |
| Name | Acceleration Positioning |
| Data type | UINT32 |
| Access | rw |
| Unit | Physical unit of PROFIBUS acceleration |
| Value range | - |
| Default value | 10,000 (rpm)/s |

| | |
|----------------------|--|
| Subindex | 4 |
| Name | Deceleration Positioning |
| Data type | UINT32 |
| Access | rw |
| Unit | Physical unit of PROFIBUS acceleration |
| Value range | - |
| Default value | 10,000 (rpm)/s |

The parameter **All Accelerations Positioning** provides access to the acceleration and deceleration ramp. If the same value is intended for both parameters, only one data value has to be transmitted. This value is then used internally for both acceleration types. It has to be taken into consideration that during a read operation only the current value of the deceleration ramp is read. The user has to make sure that reading a value is sufficient. This can be ensured, for example, by reading a value once and then writing it back.

| | |
|----------------------|--|
| Subindex | 5 |
| Name | All Accelerations Positioning |
| Data type | UINT32 |
| Access | rw |
| Unit | Physical unit of PROFIBUS acceleration |
| Value range | - |
| Default value | 10,000 (rpm)/s |

10.2.3 PNU 1002: Start Set Number

This parameter is used to select the position data set which is started through control word 1 following a positioning start command. The servo positioning controller contains up to 64 storable standard position data sets. These data sets can be selected unambiguously on the basis of 8 bits.

| | |
|----------------------|---|
| PNU | 1002 |
| Subindex | 0 |
| Name | Start Set Number |
| Data type | UINT8 |
| Access | rw |
| Unit | - |
| Value range | 0 .. 68 0..63: Standard position data sets 64..67: Reserved 68: Position data set PROFIBUS |
| Default value | 68 (Position data set PROFIBUS) |

10.2.4 PNU 1003: Position Profile Type

By using this parameter the jerk-free ramp is activated. The time is not adjustable. It is set automatically on the maximum time when activation.

If the time is changed by DIS-2 ServoCommander™ parameterisation software, the value which is read back via PROFIBUS supplies the value 2.

| | |
|----------------------|---|
| PNU | 1003 |
| Subindex | 0 |
| Name | Position Profile Type |
| Data type | UINT16 |
| Access | rw |
| Unit | - |
| Value range | 0, 2 0: Jerk free is disabled 2: Jerk free is enabled with the maximum time |
| Default value | 0 |

10.2.5 PNU 1050: Homing Method

Set the homing method by this parameter number. Please refer to the USER Manual DIS-2 48/10 FB for a detailed description of the homing methods.

| | |
|----------------------|--------------------------------|
| PNU | 1050 |
| Subindex | 0 |
| Name | Homing Method |
| Data type | INT8 |
| Access | rw |
| Unit | - |
| Value range | see USER Manual DIS-2 48/10 FB |
| Default value | 1 |

10.2.6 PNU 1051: Home Offset

Set the distance between the home position and the zero position of a homing process by this parameter number. Positive values move the zero position into positive direction referring to the home position. The following figure illustrates this by an example for the target „limit switch“ and the zero pulse as zero position. The shown direction of the arrow displays the effective direction of the offset.

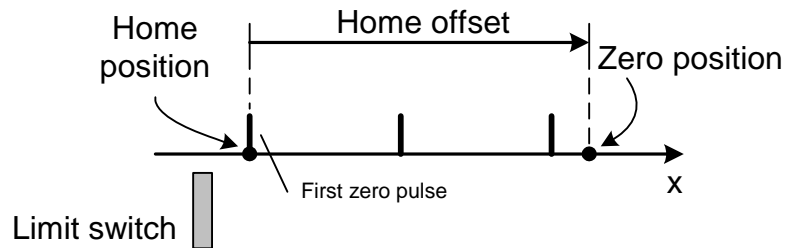


Figure 10.1: Interpretation of the home offset

The data are interpreted in the physical unit PROFIBUS position. The physical unit can be set by an appropriate menu of the parameterisation program DIS-2 ServoCommander™.

| | |
|----------------------|---------------------------------|
| PNU | 1051 |
| Subindex | 0 |
| Name | Home Offset |
| Data type | INT32 |
| Access | rw |
| Unit | Physical unit PROFIBUS position |
| Value range | - |
| Default value | 0 |

10.3 PNUs for speed control mode

This section describes the parameters required for the speed control mode.

10.3.1 PNU 1010: Target Velocity

This parameter set the speed setpoint via PROFIBUS. In speed control mode, the selector „speed setpoint “ is selected automatically.

| | |
|----------------------|------------------------------------|
| PNU | 1010 |
| Subindex | 0 |
| Name | Target Velocity |
| Data type | INT32 |
| Access | rw |
| Unit | Physical unit of PROFIBUS velocity |
| Value range | - |
| Default value | 0 |

10.3.2 PNU 1011: Accelerations for Velocity Control

Under this parameter number, the acceleration values for the speed control mode can be parameterized. The servo positioning controller defines 4 different acceleration ramps. As in most applications several ramps are parameterized in an identical manner, the following selections are possible:

- Acceleration, combined for positive and negative direction of rotation
- Deceleration, combined for positive and negative direction of rotation
- Combination of acceleration and deceleration for positive and negative direction of rotation

The data are interpreted in the way they were set as physical units. For this purpose, the DIS-2 ServoCommander™ parameterisation software opens a special window (see *chapter 7 Physical units*).

The parameter with subindex 0 and 1 provides access to the acceleration for both directions of rotation. Internally, it is always written to the accelerations for both directions of rotation. It has to be taken into consideration, that during a read operation only the current value of the acceleration ramp for a positive direction of rotation is read. The user has to make sure that reading a value is sufficient. This can be ensured, for example, by reading a value once and then writing it back.

| | |
|-------------|------------------------------------|
| PNU | 1011 |
| Name | Accelerations for Velocity Control |

| | |
|----------------------|--|
| Subindex | 0 |
| Name | Acceleration Velocity Control |
| Data type | UINT32 |
| Access | rw |
| Unit | Physical unit of PROFIBUS acceleration |
| Value range | - |
| Default value | 10.000 (rpm)/s |

| | |
|----------------------|--|
| Subindex | 1 |
| Name | Deceleration Velocity Control |
| Data type | UINT32 |
| Access | rw |
| Unit | Physical unit of PROFIBUS acceleration |
| Value range | - |
| Default value | 10.000 (rpm)/s |

The parameter **All Accelerations Velocity Control** provides access to the acceleration and deceleration ramp for both directions of rotation. If the same value is intended for all 4 parameters, only one data value has to be transmitted. This value is then used internally for all four acceleration types. It has to be taken into consideration that during a read operation only the current value of the deceleration ramp for the positive direction of rotation is read. The user has to make sure that reading a value is sufficient. This can be ensured, for example, by reading a value once and then writing it back.

| | |
|----------------------|--|
| Subindex | 2 |
| Name | All Accelerations Velocity Control |
| Data type | UINT32 |
| Access | rw |
| Unit | Physical unit of PROFIBUS acceleration |
| Value range | - |
| Default value | 10.000 (rpm)/s |

10.4 PNUs for Different Operating Modes

This section describes parameters which are not especially assigned to one single operating mode.

10.4.1 PNU 1022: Current Limitation

The parameter **Current Limitation** adjusted the torque limitation independently of the mode of operation.

The parameter **Limit Current Input Channel** is used to select the channel which limit the current. It can be selected between a direct value (RS232 or PROFIBUS) or a indirectly value over an analogue input.

Depending from the choosen selector, the parameter **Limit Current** set the value for current limit or the scaling factor for the analogue inputs.

- In the first case the moment is limited to the proportional current in mA
- In the second case the current is set to the value in mA which corresponds to 10V.

| | |
|-------------|--------------------|
| PNU | 1022 |
| Name | Current Limitation |

| | |
|----------------------|-----------------------------|
| Subindex | 0 |
| Name | Limit Current Input Channel |
| Data type | INT8 |
| Access | rw |
| Unit | - |
| Value range | 0...3, 7 |
| Default value | 0 |

| Value | Description |
|-------|---------------|
| 0 | no limitation |
| 1 | AIN0 |
| 2 | AIN1 |
| 3 | RS232 |
| 7 | Profibus |

| | |
|---------------------|---------------|
| Subindex | 1 |
| Name | Limit Current |
| Data type | INT32 |
| Access | rw |
| Unit | mA |
| Value range | 0...40 A |
| Default-Wert | -- |

10.4.2 PNU 1040: Jogging

This parameter allows the simplified access of both velocities and all four acceleration values for jogging. By this, less data has to be transmit in the cyclic data telegram. Internally, all parameters are written.

| | |
|-------------|-------------|
| PNU | 1040 |
| Name | Jogging |

| | |
|----------------------|---------------------------------|
| Subindex | 0 |
| Name | Jogging Velocity |
| Data type | INT32 |
| Access | rw |
| Unit | Physical unit PROFIBUS velocity |
| Value range | - |
| Default value | 100 rpm |

| | |
|----------------------|---|
| Subindex | 1 |
| Name | Symmetrical Jogging Accelerations |
| Data type | UINT32 |
| Access | rw The read access returns the value of the acceleration |
| Unit | Physical unit PROFIBUS acceleration |
| Value range | - |
| Default value | 10.000 (rpm)/s |

10.4.3 PNU 1290: Motor Data

Servo motors may be overloaded for a certain period of time. This parameter indicates how long the motor may receive the indicated maximum current. After the expiry of the I²t-time the current is automatically limited to the parametrized rated current in order to protect the motor. The default adjustment is 2 seconds and can be used for most motors.

The actual value of iit can be read via the object **iit ratio motor**.

| | |
|-------------|-------------|
| PNU | 1290 |
| Name | Motor Data |

| | |
|------------------|----------------|
| Subindex | 0 |
| Name | iit Time Motor |
| Data type | UINT16 |
| Access | rw |

| | |
|----------------------|-----------|
| Unit | ms |
| Value range | 0...10000 |
| Default value | 2000 |

| | |
|----------------------|-----------------|
| Subindex | 1 |
| Name | iit Ratio Motor |
| Data type | UINT16 |
| Access | ro |
| Unit | Promille |
| Value range | - |
| Default value | - |

10.4.4 PNU 1350: Enable Logic

The parameter **enable_logic** gibt an wie die Reglerfreigabe erfolgen soll.

For safety reasons this is done automatically after activation of CANopen (also after a reset).

| | |
|----------------------|--------------|
| PNU | 1350 |
| Subindex | 0 |
| Name | Enable Logic |
| Data type | UINT16 |
| Access | rw |
| Unit | - |
| Value range | 0...3 |
| Default value | 0 |

| Value | Description |
|--------------|--|
| 0 | Controller enable via digital input DIN 9 |
| 1 | Controller enable via digital input DIN 9 + RS232 |
| 2 | Controller enable via digital input DIN 9 + CAN |
| 3 | Controller enable via digital input DIN 9 + Profibus |

10.5 Actual values

This section provides an overview of actual values which can be read with the help of parameter numbers.

10.5.1 PNU 1100: Position Actual Value

This parameter is used to return the actual position value. This value is scaled with the physical unit set for PROFIBUS.

The calculation of the actual position value of the servo positioning controller may have a greater value range than the range that can be transmitted through PROFIBUS by the PNU 1100.

| | |
|----------------------|------------------------------------|
| PNU | 1100 |
| Subindex | 0 |
| Name | Position Actual Value |
| Data type | INT32 |
| Access | rw |
| Unit | Physical unit of PROFIBUS position |
| Value range | - |
| Default value | - |

10.5.2 PNU 1101: Velocity Actual Value

This parameter is used to return the actual speed value. This value is scaled with the physical unit set for PROFIBUS.

| | |
|----------------------|------------------------------------|
| PNU | 1101 |
| Subindex | 0 |
| Name | Velocity Actual Value |
| Data type | INT32 |
| Access | ro |
| Unit | Physical unit of PROFIBUS velocity |
| Value range | - |
| Default value | - |

10.5.3 PNU 1102: Current Actual Value

This parameter is used to read the actual current value. When this value is returned, it is referred to the rated motor current.

| | |
|----------------------|---|
| PNU | 1102 |
| Subindex | 0 |
| Name | Current Actual Value |
| Data type | INT32 |
| Access | ro |
| Unit | Parts per thousand with regard to the rated motor current |
| Value range | - |
| Default value | - |

10.5.4 PNU 1140: Digital Outputs

The digital outputs can be set via the parameter **digital outputs**. It has to be kept in mind that a delay of up to 10 ms may occur between sending the command and a real reaction of the digital output. The time the outputs are really set can be seen by rereading the parameter.

| | |
|----------------------|-----------------|
| PNU | 1140 |
| Subindex | 0 |
| Name | Digital Outputs |
| Data type | UINT32 |
| Access | rw |
| Unit | - |
| Value range | - |
| Default value | 0 |

| Bit | Value | Description |
|--------|-----------|--|
| 0 | 00000001h | holding brake (read only) |
| 0...15 | | reserved |
| 16 | 00010000h | controller ready for operation (read only) |
| 17,18 | 00060000h | DOUT1, DOUT2 |

10.5.5 PNU 1141: Digital Inputs

The parameter is used to read the state of the digital inputs. The available digital inputs depend on the parameterisation of the servo positioning controller.

| | |
|----------------------|----------------|
| PNU | 1141 |
| Subindex | 0 |
| Name | Digital Inputs |
| Data type | UINT32 |
| Access | ro |
| Unit | - |
| Value range | - |
| Default value | - |

| Bit | Value | Digital Output |
|---------|-----------|---|
| 0 | 00000001h | Negativ limit switch (DIN7) |
| 2 | 00000002h | Positiv limit switch (DIN8) |
| 3 | 00000008h | Interlock (controller enable (DIN9) is missing) |
| 16...25 | 03FF0000h | DIN0...DIN9 |

10.6 Parameters for the telegram structure

Due to certain technical requirements, some parameters cannot be stored under any random address in the storage area of the master. In addition to that, the length of the telegrams may differ although the same number of data is transmitted. This is why certain parameters have been defined to fill gaps, for example.

10.6.1 PNU 2000: PKW Access

Register this parameter into a telegram in order to variably access different parameter at runtime of the process. There is only one access at maximum available for the receive and response telegrams. Parameterize this access accordingly. Ensure that this access is registered in all receive and response telegrams.

The term PKW results from Parameter-Kennung-Wert (parameter - identification - value) stated in a former version of the PROFIdrive standard. There, the value for the identification was limited. Here the access is enlarged to higher parameter numbers.

| | |
|------------------|------------------------------------|
| PNU | 2000 |
| Subindex | 0 |
| Name | PKW Access (manufacturer specific) |
| Data type | 2 * UINT32 (8 Byte) |
| Access | rw |
| Unit | - |

| | | |
|----------------------|------------|--|
| Value range | Byte 0: | Access type: 0x00: No access 0x41: Read access 0x42: Write access Other values: reserved |
| | Byte 1..2: | Parameter number |
| | Byte 3: | Subindex |
| | Byte 4..7: | Data |
| Default value | 0 | |

10.6.2 PNU 2010: Placeholders

These parameters are used to fill up parameters. As a result, data areas (e.g. data blocks) can be structured such that parameters with a length of 2 or 4 bytes are located at even storage addresses.

| | |
|-------------|-------------|
| PNU | 2010 |
| Name | Placeholder |

| | |
|----------------------|----------|
| Subindex | 0 |
| Name | 8 Bit |
| Data type | UINT8 |
| Access | rw |
| Unit | - |
| Value range | - |
| Default value | 0 |

| | |
|----------------------|----------|
| Subindex | 1 |
| Name | 16 Bit |
| Data type | UINT16 |
| Access | rw |
| Unit | - |
| Value range | - |
| Default value | 0 |

| | |
|----------------------|----------|
| Subindex | 2 |
| Name | 32 Bit |
| Data type | UINT32 |
| Access | rw |
| Unit | - |
| Value range | - |
| Default value | 0 |

10.6.3 PNU 2011: Element 0

This parameter has basically the same purpose as the parameter PNU 2010 2. The only difference is that it is not shown in the telegram editor of the DIS-2 ServoCommander™ program, if it is entered at the end of a telegram. The number of entries in a telegram is limited to 10. Unused entries therefore contain this PNU.

| | |
|----------------------|-------------|
| PNU | 2011 |
| Subindex | 0 |
| Name | Element 0 |
| Data type | UNT32 |
| Access | rw |
| Unit | - |
| Value range | - |
| Default value | 0 |

10.7 Parameter for Various Intents

This section contains parameters which are not explicitly assigned to a special function group.

10.7.1 PNU 1601: Last Error Code

This parameter number returns the last generated error.

With the parameters **error Field 0** and **error Field 1** the actual errors codes can be read out.

| | |
|-------------|-------------|
| PNU | 1601 |
| Name | Error Code |

| | |
|----------------------|--------------------------------|
| Subindex | 0 |
| Name | Error Field 0 |
| Data type | UINT32 |
| Access | ro |
| Unit | - |
| Value range | see USER Manual DIS-2 48/10 FB |
| Default value | - |

| | |
|----------------------|--------------------------------|
| Subindex | 1 |
| Name | Error Field 1 |
| Data type | UINT32 |
| Access | ro |
| Unit | - |
| Value range | see USER Manual DIS-2 48/10 FB |
| Default value | - |

10.7.2 PNU 1610: Error Managment

The parameter **error number** contains the error number, which is to be found in the DIS-2 ServoCommander™ under „Error management...“.

The parameter **Error Reaction Code** indicates the reaction of the servo positioning controller to different situations.

| | |
|-------------|------------------|
| PNU | 1610 |
| Name | Error Management |

| | |
|----------------------|--------------|
| Subindex | 0 |
| Name | Error Number |
| Data type | UINT8 |
| Access | rw |
| Unit | - |
| Value range | 1..64 |
| Default value | - |

| | |
|----------------------|------------------------|
| Subindex | 1 |
| Name | Error Reaction Code |
| Data type | UINT8 |
| Access | rw |
| Unit | - |
| Value range | 0x00, 0x03, 0x05, 0x08 |
| Default value | - |

| Value | Description |
|--------------|------------------------------------|
| 0x00 | no reaction |
| 0x03 | warning (display) |
| 0x05 | brake with quick stop deceleration |
| 0x08 | power stage (motor coast off) |

11 Operating modes

11.1 Overview

The servo positioning controllers DIS-2 48/10 FB offer two operating modes via PROFIBUS:

- ❖ Speed control
- ❖ Positioning

Within the operating modes, different behaviour is the result of setpoint selectors which can be parameterized differently.

PROFIdrive (see *chapter 1.2 PROFIBUS documentation*) defines so-called application classes. These classes can be set using corresponding parameter numbers. To simplify this, the operating mode is linked to the cyclic reception telegrams. Following the PROFIdrive specification, the following operating modes and the associated reception telegrams are supported at present:

| Operating mode | Reception telegram | Identifier |
|----------------|--------------------|------------|
| Positioning | 0 | 0xE0 |
| Speed control | 1 | 0xE1 |

Other operating modes cannot be selected at present.

11.2 Parameters

The operating mode is continuously monitored or selected with the help of reception telegrams. The process of changing the operating mode requires several cycles of an internal function. This is why a manufacturer-specific parameter number has been defined to be able to read the current operating mode.

11.2.1 PNU 1500: Operating Mode

This manufacturer-specific parameter is used to set/read the operating mode. The operating mode is served regardless of the setpoint selectors. Other special features can be found in the associated chapters.

| | |
|----------------------|--|
| PNU | 1500 |
| Subindex | 0 |
| Name | Operating Mode |
| Data type | UINT8 |
| Access | rw |
| Unit | - |
| Value range | 0x08: Speed control 0x10: Positioning |
| Default value | - |

11.3 Speed control mode

PROFIdrive defines special features for handling the setpoint. For this purpose, the meanings of the corresponding bits in control word 1 have been defined. The setpoint can be deactivated, for example, or the setpoint ramp can be stopped ("frozen").

11.4 Positioning mode

PROFIdrive defines special features concerning the behaviour in the positioning mode. For this purpose, the meanings of the corresponding bits in control word 1 have been defined. Homing controlled by the slave, for example, is started by a certain bit. Some features are now described in detail:

- ❖ All global options for homing are also valid when homing is started through the PROFIdrive control word 1. An optional following positioning to zero position is performed.
- ❖ Due to a manufacturer-specific implementation, positioning is started only on a rising edge of the associated bit in control word 1.
- ❖ Positioning is started even if no successful homing has been performed beforehand.

Other manufacturer-specific bits are defined in control word 1 in order to be able to perform optional relative or absolute positioning tasks.

- ❖ Distinction between absolute and relative positioning
- ❖ Definition as to whether at the start of a positioning run a running position has to be interrupted or whether the positioning run to the started has to be added to the running positioning.

Some applications require a sequence of motion tasks to be executed without interruption (see Figure 11.1).

- ❖ Interruption of the running positioning

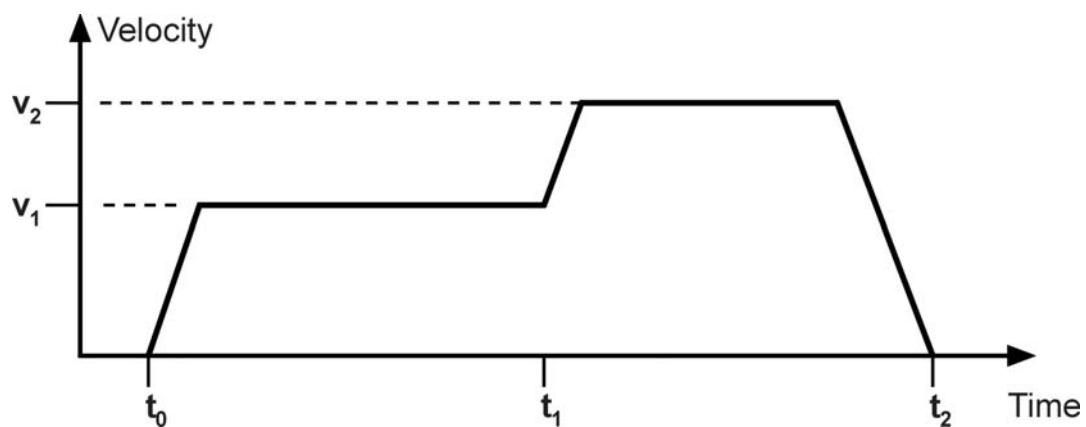


Figure 11.1: Uninterrupted sequence of motion tasks

12 Profile-specific parameter numbers

This chapter provides an overview of the parameter numbers (PNU) which were implemented following PROFIdrive.

12.1 Overview

The following table provides an overview of the implemented PNUs.

| PNU | Sub-index | Description | Type | Access |
|-----|-----------|---|--------|--------|
| 967 | 0 | Control word 1, see <i>chapter 9.2 Control word 1</i> | V2 | rw |
| 968 | 0 | Status word 1, siehe <i>chapter 9.3 Status word 1</i> | V2 | ro |
| 971 | 0 | Save parameters | UINT16 | rw |

Note: Data type V2 is defined as a bit sequence with a length of 2 bytes.

12.2 PNU description

The PNUs 967 and 968 are described in detail in *chapter 9 Device control*. The PNU 971 is described in the following chapter.

12.2.1 PNU 971: Transfer into a Non-Volatile Memory

Active different saving processes of parameters inside the servo positioning controller by this parameter number.

| | | |
|----------------------|-------------------------------------|--|
| PNU | 971 | |
| Subindex | 0 | |
| Name | Transfer into a non-volatile memory | |
| Data type | UINT16 | |
| Access | rw | |
| Unit | - | |
| Value range | 0: | No action |
| | 1: | Save the actual parameter set and all position data sets |
| | 2.. 65535: | reserved |
| Default value | 0 | |

13 Function and data blocks for SIEMENS S7

13.1 Overview

Special function blocks have been written for DIS-2 48/10 FB servo positioning controllers and Siemens PLC systems (SIMATIC-S7 control systems). These functions blocks facilitate the integration of the servo positioning controllers into a PLC program with PROFIBUS functionality. The various function and data blocks (FD, DB) are assigned to one of the operating modes.

To make the use of the function blocks clearer, example programs were written.



This chapter is intended to familiarise the user quickly with the functions of the inputs and outputs and the use of the FBs and DBs within the S7 environment. **However, this chapter does not replace the previous chapters of the PROFIBUS-DP Product Manual.**

The available example programs are only examples and explain the fundamental methods for using the function and data blocks.

When the example programs are used in customer-specific applications, the user has to check whether all function- and safety-relevant requirements have been fulfilled.



Information

Specific function and data blocks have been developed for the DIS-2 48/10 FB servo positioning controllers. These function and data blocks are integrated in example programs and can be downloaded free of charge under www.metronix.de.

If one switches between the operating modes, one also has to switch between two function blocks. If the controller enabling shall remain active during switching between two function blocks, it might be necessary to modify the function blocks accordingly. Please contact the technical support department.



Attention

To switch from one operating mode to another, the current FB has to be deactivated and an FB of another operating mode has to be activated. As a result, the controller enabling might be deactivated.

13.2 Function and data blocks for DIS-2 48/10 FB servo positioning controllers

13.2.1 Function block (FB) overview

The function blocks (FBs) are used to control the state diagram implemented in the servo positioning controller.

Status word 1 in byte 2/3 of the DB40 actual_value data block symbolizes the actual state of the servo positioning controller. Control word 1, which is contained in bytes 2/3 of every mode-specific telegram format and described by the FB, is used to control the servo positioning controller.

The master connection provides the PLC system in defined I/O areas with the input and output data of the servo positioning controllers. These data are read out of the slave through SFC14 and written to the slave through SFC15. SFCs 14 and 15 are system functions which **must** be used for consistent reading and writing of telegrams with a length > 4 bytes.

The data are stored in the data blocks defined for the operating mode in question through the corresponding SFCs. The SFCs are not integrated in the function blocks and **must** be loaded as S7 program elements.

In practice, the DBs are used as I/O modules to control the states of the servo positioning controller and to transmit data which have to be sent to the servo positioning controller.

Every operating mode and every servo positioning controller requires separate function blocks. If several servo positioning controllers are used in different operating modes, this might lead to bottlenecks concerning the storage utilization of the application.




Information

The order of the data in the data blocks corresponds to the order defined in the telegram format of the associated operating mode (FB).

13.2.2 FBs of DIS-2 48/10 FB servo positioning controllers

13.2.2.1 FB_position (FB 41 positioning mode)

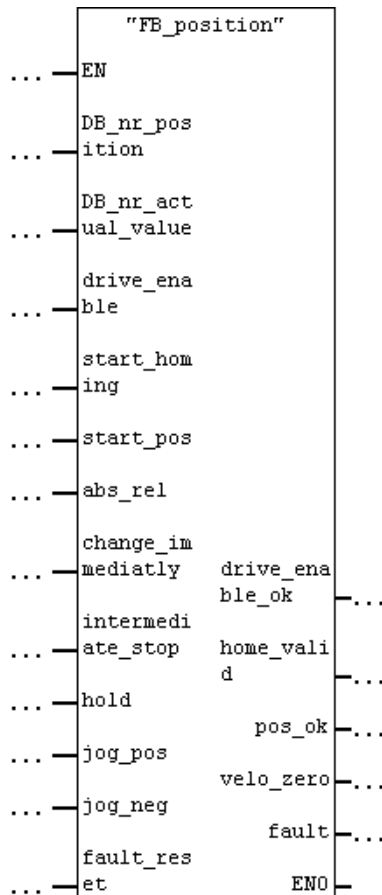

- **Parameters:**

- **DB_nr_position:**

Number of the data block containing the data for the positioning mode (INT).

- **DB_nr_actual_value:**

Number of the data block containing the actual value data (INT).

- **Inputs:**

- **drive_enable:**

This input is used to activate the controller enabling in the positioning mode. The drive is held in its position.

- **start_homing:**

This input is used to start a homing run. The motor is started. This requires an active controller enabling, i.e. the output drive_enable_ok must be set. If the start_homing input is reset during homing, the homing run is aborted without an error.

-start_pos:

A rising edge signals that a new motion task has to be accepted. A falling edge has no consequence.

During homing, this input has no effect.

-abs_rel:

If this input is set with a rising edge at the start_pos input, the positioning run is executed relatively to the current target position. If this input is not set with a rising edge at start_pos, an absolute positioning run is executed.

-change_immediatly:

If this input is set with a rising edge at the start_pos input, a running positioning is aborted immediately and replaced with a new motion task. If this input is not set with a rising edge at start_pos, the new motion task is added to the end of the running positioning.

-intermediate_stop

If this input is not set, a started positioning run is completed. If the input is set during a running positioning run, the drive is stopped and remains in position control mode. The current positioning run is **not** terminated. It will be continued when the intermediate_stop input is reset.

During homing, this input has no effect.

-hold:

If this input is set, the current positioning run is stopped. The system is slowed down with the deceleration valid for this positioning run. After the process has been completed, the pos_ok output is not set. A reset of the input has no effect.

During homing, this input has not effect.

-jog_pos:

If the input is set, the drive accelerates with the acceleration value set in position set „Tipp & Teach“ until it reaches the speed also parameterized in this position set.

If there is a falling edge at this input, the drive slows down to standstill with the deceleration set in position set „Tipp & Teach“.

During homing, this input has no effect.

-jog_neg:

If the input is set, the drive accelerates with the acceleration set in position set „Tipp & Teach“ until it reaches the speed also parameterized in this position set.

If there is a falling edge at this input, the drive slows down to standstill with the deceleration set in position set „Tipp & Teach“.

During homing, this input has no effect.

-fault_reset:

If there is a rising edge at this input, pending fault messages are acknowledged.

- **Outputs:**

- **drive_enable_ok:**

The controller enabling of the servo positioning controller is active.

- **home_valid:**

This output is set, if there is a valid home position. The output is not set during a running homing run. It is not set or reset until after a homing run has been completed successfully.

- **pos_ok:**

This output is set, when the current position is in the target window after the positioning run has been completed.

- **velo_zero:**

This output is set, if the actual velocity is zero in range of the message window.


The message window is parametrized in the DIS-2 ServoCommander™ under **Parameters - Messages – Motor speed messages – message window**.

- **fault:**


If this output is set, there is a fault. The controller enabling is cancelled.

The output is reset after the fault has been acknowledged.

Please note the timing shown in the diagram when using the function blocks.

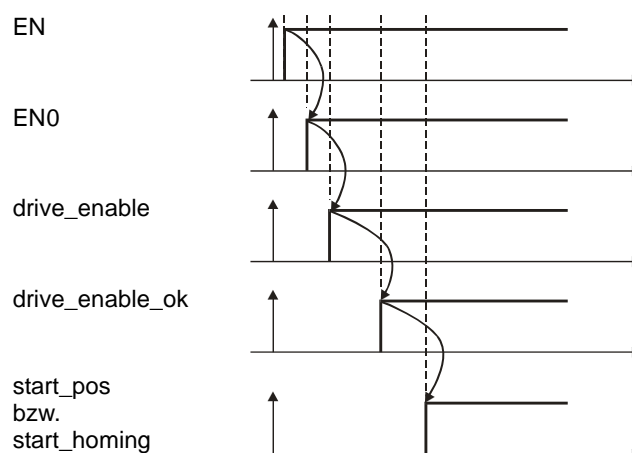

13.2.2.2 FB_velocity (FB 43 speed control)

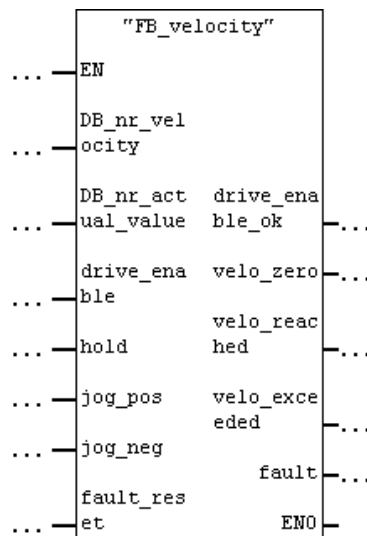

- Parameters:

- DB_nr_velocity:

The number of the data block containing the data for speed control mode (INT)

- DB_nr_actual_value:

The number of the data block containing the actual value data (INT).

- Inputs:

- drive_enable:

Activation of the controller enabling in speed control mode. The speed setpoint takes effect depending on the other inputs of the function block.

- hold:

If this input is set, the speed setpoint is blocked. The drive slows down to standstill as quickly as possible. When the input is reset, the motor accelerates along the parameterized setpoint ramp to reach the adjusted speed setpoint.

- jog_pos:

If this input is set, the drive accelerates with the set acceleration of the setpoint ramp until it reaches the speed parameterized in position set „Tipp & Teach“.

If there is a falling edge at this input, the drive slows down to standstill with the set deceleration of the setpoint ramp.

- jog_neg:

If this input is set, the drive accelerates with the set acceleration of the setpoint ramp until it reaches the speed parameterized in position set „Tipp & Teach“.

If there is a falling edge at this input, the drive slows down to standstill with the adjusted deceleration of the setpoint ramp.

-fault_reset:

If there is a rising edge at this input, pending fault messages are acknowledged.

- **Outputs:**

-drive_enable_ok:

The controller enabling of the servo positioning controller is active.

-velo_zero:

This output is set, if the actual velocity is zero in range of the message window.

The message window is parametrized in the DIS-2 ServoCommander™ under

Parameters - Messages – Motor speed messages – message window.

-velo_reached:

When this output is set, the actual velocity is in the parameterized tolerance window of the target speed (declared speed).

-velo_exceeded:

If this output is set, the actual speed is greater than the free reference speed.

-fault:

If this output is set, there is a fault. The controller enabling is cancelled.

The output is reset after the fault has been acknowledged.

13.2.3 Integration of FBs and DBs

As shown in the overview, the function and data blocks developed for the DIS-2 48/10 FB servo positioning controllers can be downloaded free of charge.



Information

The function and data blocks can be downloaded under www.metronix.de

The blocks are packaged into two example projects in the file **FB_DB_DIS-2 FB_xpx.zip**. **xpx** stands for the current version number. The file can be opened using commercially available programs, such as, for example, WINZIP. Example projects:


| Operating mode | Example project |
|----------------|------------------|
| Positioning | DIS-2_FB_POS.zip |
| Speed control | DIS-2_FB_VEL.zip |

The unpacked example projects can be de-archived under STEP7. The relevant FBs, DBs and SFCs can be copied from these de-archived example objects.

To ensure consistent data exchange between the PROFIBUS master and the PROFIBUS slave, the system functions SFC14 (consistent reading) and SFC15 (consistent writing) must be used. The following parameters have to be used for the blocks:

Reading data using SFC14:

Input data area
256dez = 100hex

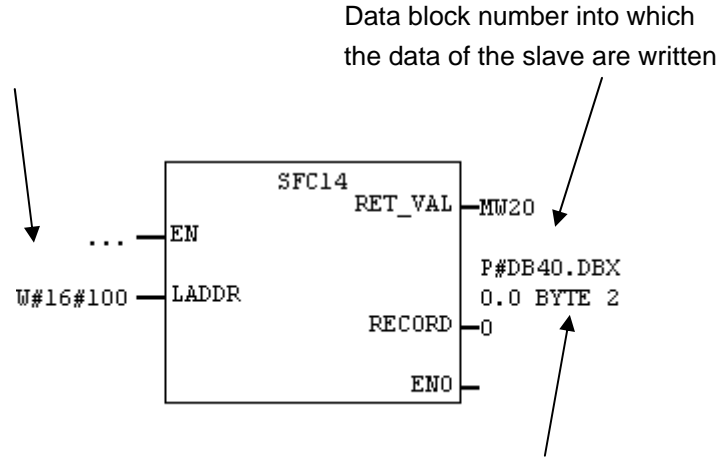

Initial address within the DB (0.0) and number of bytes received (20 bytes)

| Parameter | Declaration | Data type | Storage area | Description |
|-----------|-------------|-----------|-----------------------|---|
| LADDR | INPUT | WORD | E, A, M, D, L, const. | Projected initial address of the E-area of the module which has to be read. |
| RET_VAL | OUTPUT | INT | E, A, M, D, L | If a fault occurs while the function is processed, the return value contains a fault code. |
| RECORD | OUTPUT | ANY | E, A, M, D, L | Target area for the useful data read. This area has to be as long as has been projected for the selected module with STEP 7. Only the data type BYTE is admissible. |


In both example projects (positioning example project and speed control example project), the same actual value data are returned. As a consequence, the response telegram is configured in an identical manner in both example projects.

Writing data using SFC15:


Depending on the operating mode (positioning or speed control), different data are transmitted to the PROFIBUS slave. This leads to different telegram lengths affecting the parameterisation of SFC15.

Writing data for the positioning mode:

Output data area 256dez = 100hex

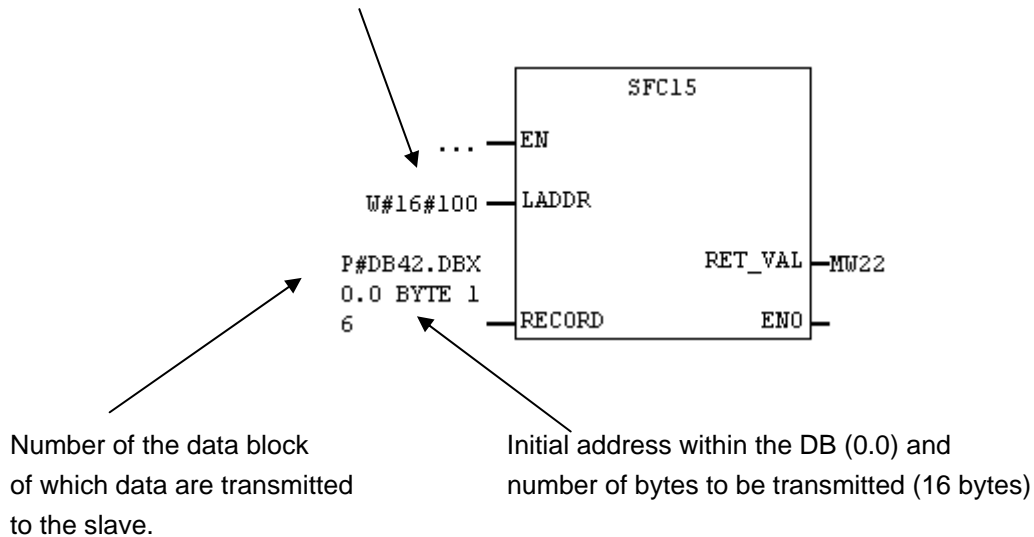**Writing data for the speed control mode:**

Output data area 256dez = 100hex

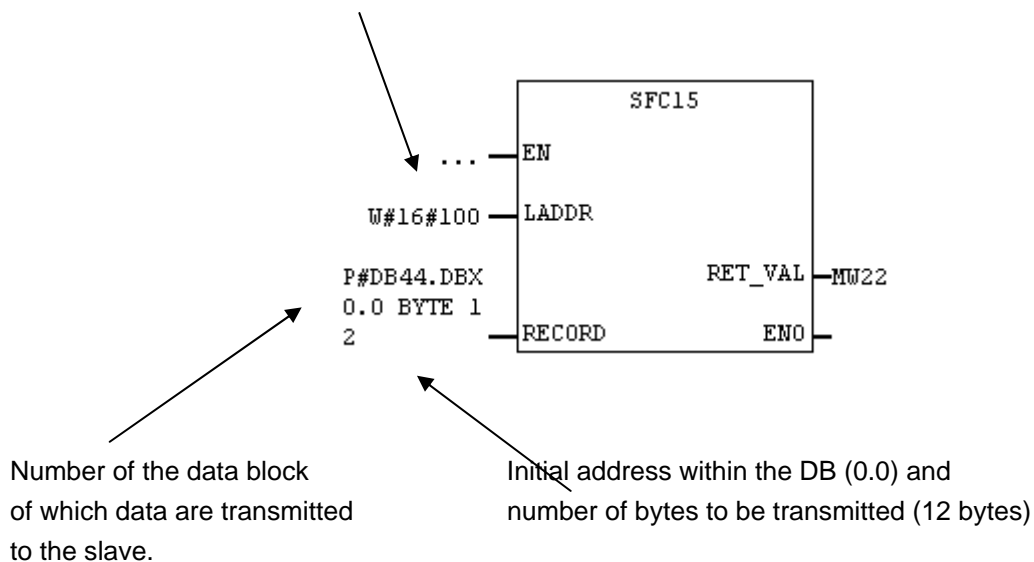

| Parameter | Declaration | Data type | Storage area | Description |
|-----------|-------------|-----------|-----------------------|--|
| LADDR | INPUT | WORD | E, A, M, D, L, const. | Projected initial address of the A-area of the module which has to be written to. |
| RECORD | INPUT | ANY | E, A, M, D, L | Source area of the useful data to be written. It has to be as long as has been projected for the selected module with STEP 7. Only the data type BYTE is admissible. |
| RET_VAL | OUTPUT | INT | E, A, M, D, L | If a fault occurs while the function is processed, the return value contains a fault code. |

13.2.4 PROFIBUS connection of DIS-2 48/10 FB servo positioning controller

Several steps have to be performed to set up a functional PROFIBUS connection. Some settings should or have to be made before the PROFIBUS communication can be activated.

The transmission of data using the DP-V0 service requires a definition of the number of data to be transmitted and of the meaning of these data, both at the master and at the slave end. If the example projects described above are used, the master and the slave have to be configured accordingly.

When the example projects are loaded, the data blocks are already structured as required. The telegrams have to be structured as required by the example projects using the DIS-2 ServoCommanderTM parameterisation program. Information concerning the use of the telegram editor and further information on the parameters can be found in the previous chapters of the PROFIBUS product manual.

13.2.4.1 Reception telegram of the speed control example project

In this case, reception telegram 1 at the servo positioning controller end has to be configured. The following screenshot shows the necessary parameterisation of the reception telegram for the example project. An additional diagnostic information is displayed above the button „Change entry“ if a communication could have been established between Master and Slave. The really configured length of the telegram from Master to Slave is displayed.

The following table describes the telegram structure:

| Address | Content (parameter number) | Description |
|---------|--------------------------------|---|
| 0 | Identifier (= 0xE1) | Fixed identifier |
| 1 | 8-bit placeholder (PNU 2010 0) | Free |
| 2 | Control word 1 (PNU 967 0) | Control word for device control, has to be under this address |
| 4 | Target velocity (PNU 1010 0) | Speed setpoint, indication with the physical unit set for PROFIBUS |
| 8 | Acceleration (PNU 1011 2) | Combination of the values for acceleration and deceleration, indication with the physical unit set for PROFIBUS |


The total length of this telegram is 12 bytes. When the slave is integrated into the hardware configuration of the master, the module:

6 Words Output

has to be selected for the output data and connected to one of the ports.

13.2.4.2 Reception telegram of the positioning example project

In this case, reception telegram 0 at the servo positioning controller end has to be configured. The following screenshot shows the necessary parameterisation of the reception telegram for the example project. An additional diagnostic information is displayed above the button „Change entry“ if a communication could have been established between Master and Slave. The really configured length of the telegram from Master to Slave is displayed.

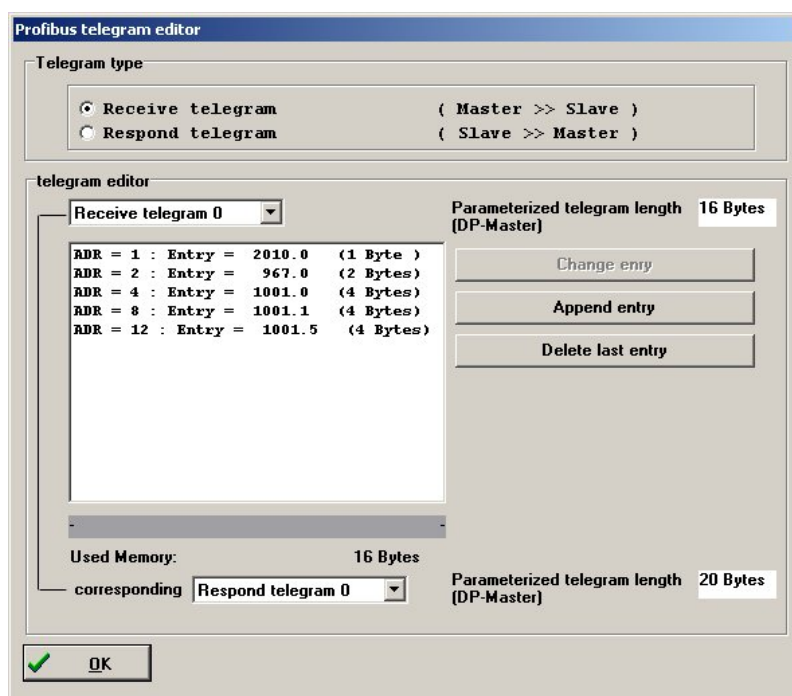

The following table describes the telegram structure:

| Address | Content (parameter number) | Description |
|---------|--------------------------------|---|
| 0 | Identifier (= 0xE0) | Fixed identifier |
| 1 | 8-bit placeholder (PNU 2010 0) | Free |
| 2 | Control word 1 (PNU 967 0) | Control word for device control, has to be under this address |
| 4 | Target position (PNU 1001 0) | Target position, indication with the physical unit set for PROFIBUS |
| 8 | Profile velocity (PNU 1001 1) | Profile velocity during positioning, indication with the physical speed unit set for PROFIBUS |
| 12 | Accelerations (PNU 1001 5) | Combination of the values for acceleration and deceleration, indication with the physical unit set for PROFIBUS |


The total length of this telegram is 16 bytes. When the slave is integrated into the hardware configuration of the master, the module:

8 Words Output

has to be selected for the output data and connected to one of the ports.

13.2.4.3 Response telegram for the example projects

In both example projects, the same actual value data are transmitted from the slave to the master. Thus, the same response telegram 0 has to be configured for both reception telegrams (0 and 1) at the servo positioning controller end. The following screenshot shows the necessary parameterisation for the example project. An additional diagnostic information is displayed above the button „Change entry“ if a communication could have been established between Master and Slave. The really configured length of the telegram from Master to Slave is displayed.

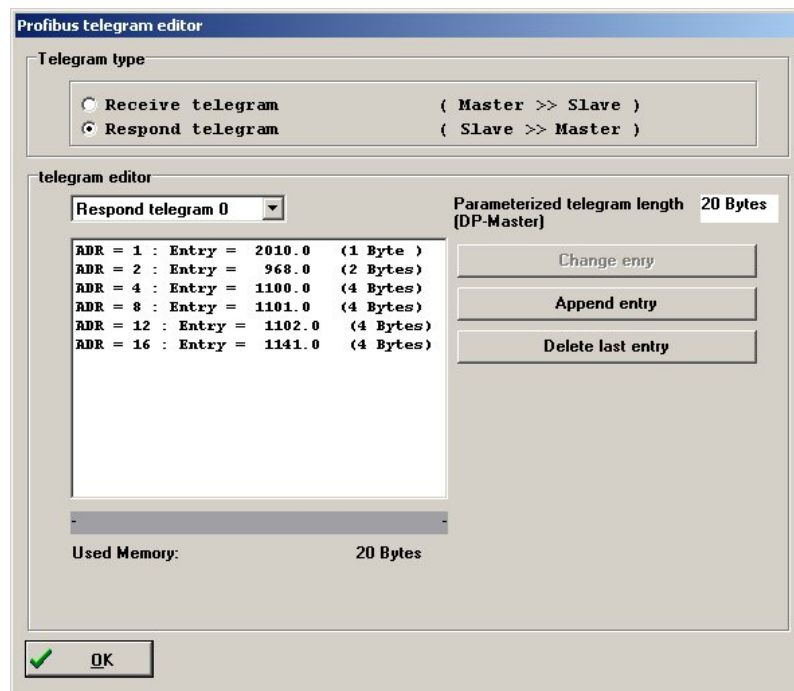

The following table describes the telegram structure:

| Addresses | Content (parameter number) | Description |
|-----------|------------------------------------|---|
| 0 | Identifier (= 0xF0) | Fixed identifier |
| 1 | Operating mode (PNU 1500 0) | Current operating mode of the servo positioning controller |
| 2 | Status word 1 (PNU 968 0) | Control word for device control, has to be under this address |
| 4 | Position Actual Value (PNU 1100 0) | Actual position, indication with the physical position unit set for PROFIBUS |
| 8 | Velocity Actual Value (PNU 1101 0) | Actual speed value, indication with the physical speed unit set for PROFIBUS |
| 12 | Current actual value (PNU 1102 0) | Actual value of the current, indicated per thousand referring to the nominal motor current |
| 16 | Digital inputs (PNU 1141 0) | Current status of the digital inputs, see for the meaning of the bits in the detailed description of the PNU. |


The total length of this telegram is 20 bytes. When the slave is integrated into the hardware configuration of the master, the module:

10 Words Output

has to be selected for the input data and connected to one of the ports.

13.2.5 Creating an S7 program

First start the STEP 7 software. After the start of the SIMATIC Manager, the STEP7 Wizard is opened. Follow the instructions of the STEP 7 Wizard. The STEP 7 Wizard leads you step by step through the creation of an S7 project.

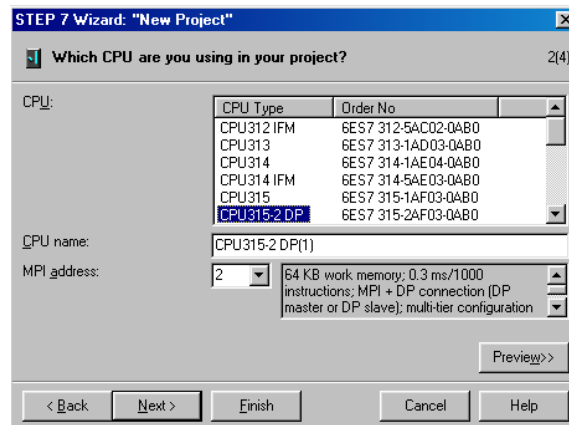

Then select the organization module **OB1**. **OB1** is located at the top program level and organizes all the other modules.

Additional modules can be added later.

After that, select the preferred programming language. This language can be converted into other programming languages later.

13.2.6 Integrating the GSD file

As a next step, the hardware of the PLC system used must be configured in the project created. To do so, select **SIMATIC 300** in the left pane. Then double-click on **Hardware** in the right pane.

Close the station by clicking on **Station -> Close**, without quitting the hardware configuration program.




The command **Options->Install new GSD...** adds the GSD file MME0A38.gsd, which is required for adding the DIS-2 48/10 FB to the hardware catalog.




13.2.7 Hardware configuration

The S7 project must then be opened using the command **Station -> Open...**

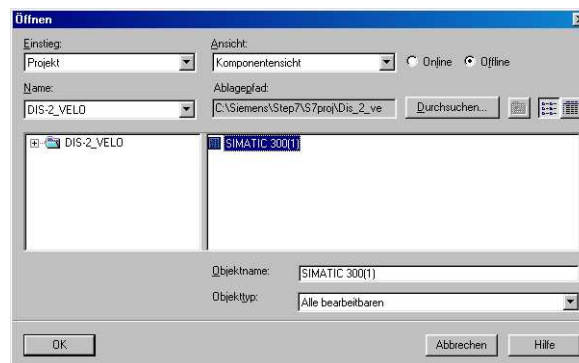

Select the project name in the **Name** field of the **Open** window. Then select **SIMATIC 300(1)** in the right window pane. Then click on the **OK** button to open the hardware configuration of your project.

The following screenshot shows the hardware catalogue from which the hardware components can be selected. If the hardware catalogue is not shown, it can be called up by clicking on **View -> Catalog**.

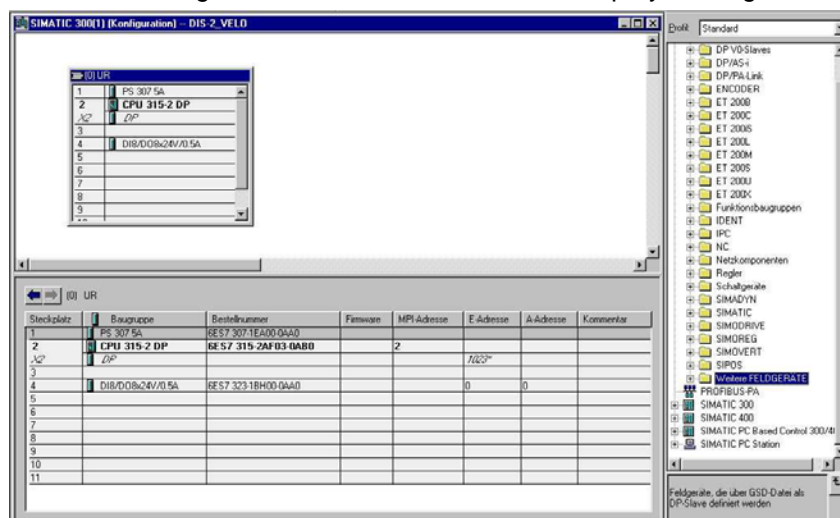

Use the mouse to select the desired hardware components from the **Catalog** and drag them into the station window.

| Slot | Module | Order number | Firmware | MPI address | I address | Q address |
|------|-------------------------|----------------------------|----------|-------------|-----------|-----------|
| 1 | PS307 5A | 6ES7 307-1EA00-0AA0 | | | | |
| 2 | CPU315-2 DP | 6ES7 315-2AF03-0AB0 | | 2 | | |
| 3 | <i>DP-Master</i> | | | | 1023* | |
| 4 | D18/D08x24V/0.5A | 6ES7 323-1BH00-0AA0 | | | 0 | 0 |
| 5 | | | | | | |




Information

The order numbers in the project must match the order numbers of the hardware (shown on the front). Port 3 is not used as the project does not use a controller board.

13.2.8 Integrating the servo positioning controller

The servo positioning controller is integrated by selecting the line **X2 DP-Master** in the station window. Then add the Profibus with the help of the command **Insert -> Master System**.

Then add the desired module to the Profibus using drag&drop from the directory **PROFIBUS-DP -> Additional Field Devices -> Closed-loop controllers-> DIS-2 48/10 FB** of the hardware catalogue.

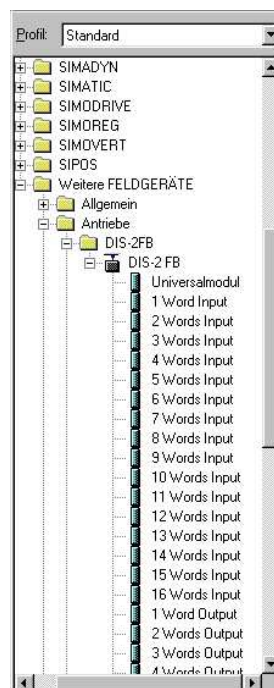


The telegram length has to be taken into consideration when selecting the modules. This means:

- ❖ Select the module **8 Words Output** for the positioning mode setpoint telegram and the module **6 Words Output** for the speed control setpoint telegram.
- ❖ Select the module **10 Words Input** for the actual value telegram.

It is also possible to use both function blocks in one project. In this case, the module **8 Words Output** has to be used.

The Profibus address of the servo positioning controller has to be set in the **Properties** window. The address has to be the same as the address previously set with the DIS-2 ServoCommander™ program. The servo positioning controller is now integrated.


The hardware configuration should now look like that:

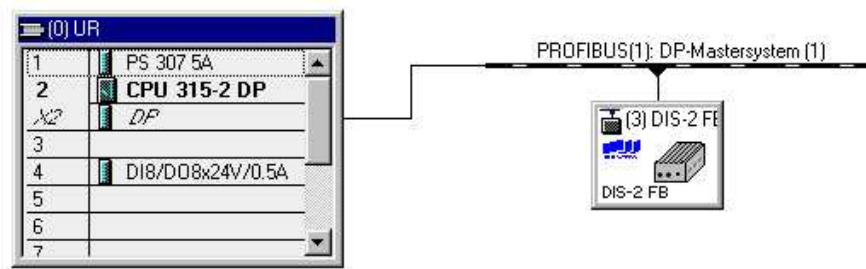

The S7 project is now prepared and programming can be started.

13.2.9 Overview of function and data blocks:

Overview of positioning mode example project

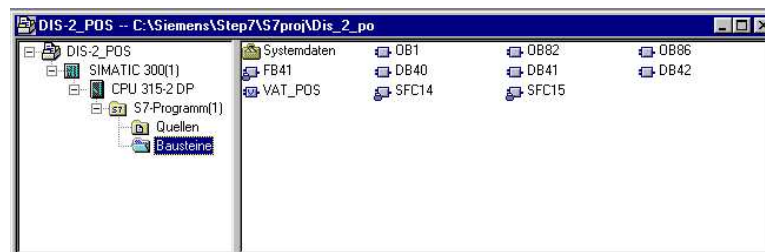

Overview of speed control example project



Actual values

DB40actual_value Actual values of the servo positioning controller (for both example projects)

| ■ DB40 -- DIS-2_POS\SIMATIC 300(1)\CPU 315-2 DP | | | | | |
|---|-----------------------|-------|-------------|------------|--|
| Adresse | Name | Typ | Anfangswert | Aktualwert | Kommentar |
| 0.0 | Telegrammkennung | BYTE | B#16#0 | B#16#0 | |
| 1.0 | Betriebsart | BYTE | B#16#0 | B#16#0 | herstellerspezifisch |
| 2.0 | PROFIDRIVE_Statusword | WORD | W#16#0 | W#16#0 | |
| 4.0 | Istposition | DINT | L#0 | L#0 | übertragener Parameter in default-Parametrierung |
| 8.0 | Istgeschwindigkeit | DINT | L#0 | L#0 | übertragener Parameter in default-Parametrierung |
| 12.0 | Wirkstromistwert | DINT | L#0 | L#0 | übertragener Parameter in default-Parametrierung |
| 16.0 | digitale_Eingaenge | DWORD | DW#16#0 | DW#16#0 | übertragener Parameter in default-Parametrierung |

Positioning

FB41 FB_position Function block for the positioning mode

DB41 Instance DB for FB41 The data block of internal variables belonging to the function block

DB42 DB_position Positioning data

| ■ DB42 -- DIS-2_POS\SIMATIC 300(1)\CPU 315-2 DP | | | | | |
|---|------------------------|------|-------------|------------|--|
| Adresse | Name | Typ | Anfangswert | Aktualwert | Kommentar |
| 0.0 | Telegrammkennung | BYTE | B#16#0 | B#16#0 | |
| 1.0 | frei | BYTE | B#16#0 | B#16#0 | vorläufige Platzhaltervariable |
| 2.0 | PROFIDRIVE_Controlword | WORD | W#16#0 | W#16#0 | |
| 4.0 | Zielposition | DINT | L#0 | L#5000 | zu übertragender Parameter in default-Parametrierung |
| 8.0 | Fahrtgeschwindigkeit | DINT | L#0 | L#200 | zu übertragender Parameter in default-Parametrierung |
| 12.0 | Beschleunigung | DINT | L#0 | L#100000 | zu übertragender Parameter in default-Parametrierung |

Speed control

FB43 FB_velocity Function block for speed control mode

DB43 Instance DB for FB43 Data block of internal variables belonging to the function block

DB44 DB_velocity Data for speed control mode

| ■ DB44 -- DIS-2_VELO\SIMATIC 300(1)\CPU 315-2 DP | | | | | |
|--|--------------------------|------|-------------|------------|--|
| Adresse | Name | Typ | Anfangswert | Aktualwert | Kommentar |
| 0.0 | Telegrammkennung | BYTE | B#16#0 | B#16#E1 | |
| 1.0 | frei | BYTE | B#16#0 | B#16#0 | vorläufige Platzhaltervariable |
| 2.0 | PROFIDRIVE_Controlword | WORD | W#16#0 | W#16#0 | |
| 4.0 | Geschwindigkeitssollwert | DINT | L#500 | L#500 | zu übertragender Parameter in default-Parametrierung |
| 8.0 | Beschleunigung | DINT | L#100000 | L#50000 | zu übertragender Parameter in default-Parametrierung |